

OI-6000K-X-X-X-NXP-X


Non-Explosion-Proof

Wire Powered

Ambient Air

Toxic Gas

Detector

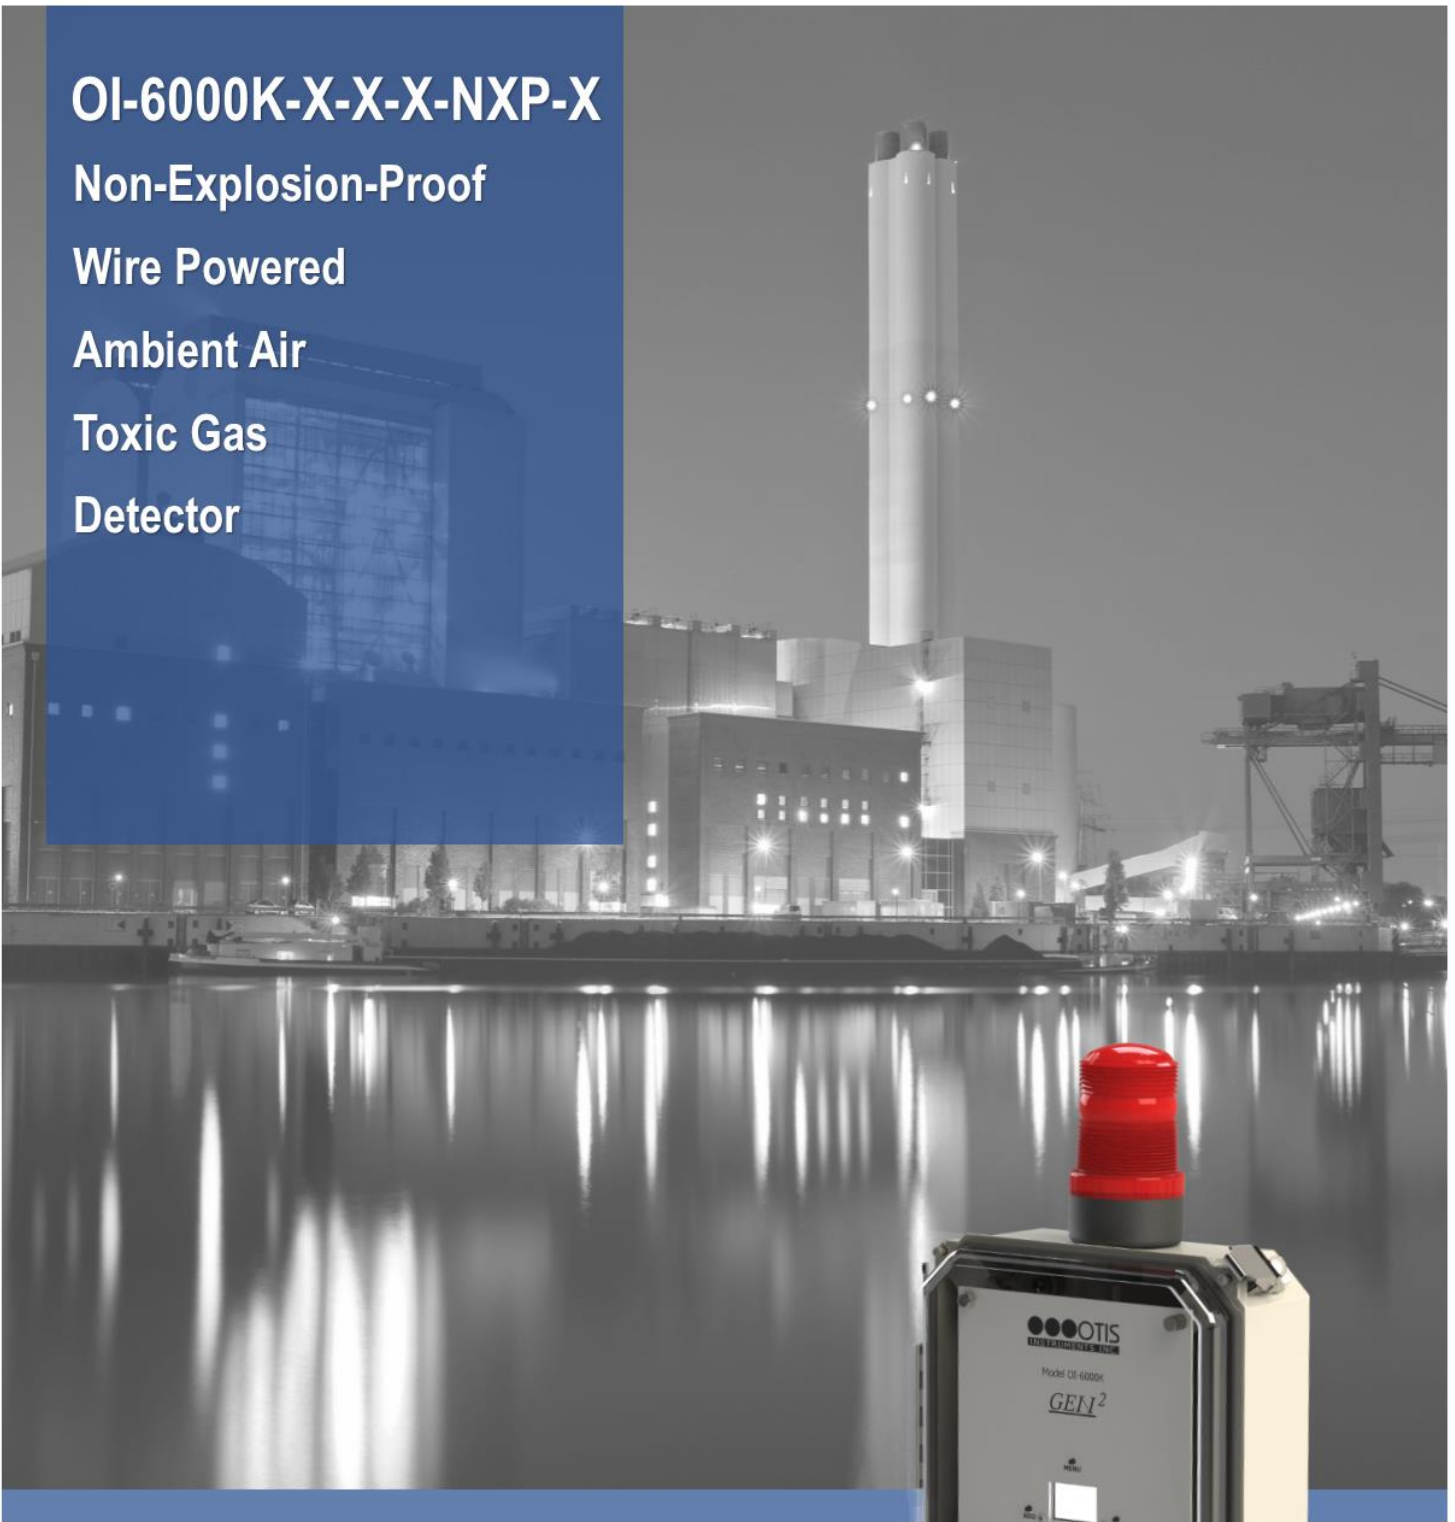

OPERATION MANUAL REV 1.0



GEN²

CAUTION

CAUTION: FOR SAFETY REASONS, THIS EQUIPMENT MUST BE OPERATED AND SERVICED BY QUALIFIED PERSONNEL ONLY. READ AND UNDERSTAND THE INSTRUCTION MANUAL COMPLETELY BEFORE OPERATING OR SERVICING.

DANGER

DANGER: OTIS INSTRUMENTS INC. OI-600K-X-X-X-NXP-X IS AN AMBIENT AIR TOXIC GAS SENSOR ASSEMBLY AND ONLY MONITORS IN THE IMMEDIATE VICINITY OF THE SENSOR HOUSING. A SITE SURVEY IS REQUIRED IN ORDER TO DETERMINE THE BEST PLACEMENT AND QUANTITY OF SENSOR ASSEMBLIES. IMPROPER INSTALLATION CAN LEAD TO AN UNDETECTABLE GAS LEAK WHICH COULD RESULT IN PERSONAL INJURY OR LOSS OF LIFE.

THE OI-600K-X-X-X-NXP-X IS NOT TO BE USED IN CLASSIFIED LOCATIONS.

TABLE OF CONTENTS

| | | |
|----------|--|-----------|
| 1 | <i>PRODUCT OVERVIEW</i> | 1 |
| 1.1 | INTRODUCTION | 1 |
| 1.2 | PRODUCT SPECIFICATIONS | 2 |
| 1.3 | SYSTEM DIAGRAMS | 3 |
| 1.3.1 | EXTERNAL SYSTEM DIAGRAM..... | 3 |
| 1.3.2 | INTERNAL SYSTEM DIAGRAM..... | 4 |
| 1.3.3 | ASSEMBLY DIAGRAM..... | 5 |
| | | |
| 2 | <i>INSTALLATION AND START-UP</i> | 6 |
| 2.1 | PRODUCT PLACEMENT | 6 |
| 2.2 | PRODUCT MOUNTING | 7 |
| 2.3 | WIRING CONFIGURATIONS..... | 7 |
| 2.3.1 | OPENING THE ENCLOSURE..... | 8 |
| 2.3.2 | CONNECTING POWER | 8 |
| 2.3.3 | CONNECTING 4-20 MA OUTPUT | 10 |
| 2.3.4 | CONNECTING RS-485 | 11 |
| 2.3.5 | CONNECTING RELAYS/ALARMS..... | 13 |
| 2.3.6 | CONNECTING THE FAULT TERMINAL | 19 |
| 2.3.7 | CLOSING THE ENCLOSURE..... | 20 |
| 2.4 | SYSTEM START-UP | 20 |
| 2.5 | NORMAL OPERATING MODE | 21 |
| | | |
| 3 | <i>PRODUCT SETTINGS AND CONFIGURATION</i> | 22 |
| 3.1 | RELAY TEST | 22 |
| 3.1.1 | PERFORMING THE RELAY TEST | 23 |
| 3.2 | SYSTEM INFORMATION..... | 23 |
| 3.3 | NULL/CALIBRATION TIMER INFORMATION | 24 |
| 3.4 | UNIT INFORMATION | 24 |
| 3.5 | LATCHING AND NON-LATCHING RELAY SETTINGS..... | 25 |
| 3.5.1 | RELAY 1: LATCHING/NON-LATCHING SETTING..... | 25 |
| 3.5.2 | RELAY 2: LATCHING/NON-LATCHING SETTING..... | 26 |
| 3.6 | RELAY FAIL-SAFE SETTING | 26 |
| 3.6.1 | RELAY 1: FAIL-SAFE SETTING | 27 |
| 3.6.2 | RELAY 2: FAIL-SAFE SETTING | 27 |
| 3.7 | FAULT TERMINAL FAIL-SAFE SETTING | 28 |
| 3.7.1 | FAULT TERMINAL: FAIL-SAFE SETTING | 28 |
| 3.8 | CALIBRATION METHOD..... | 28 |
| 3.9 | MODBUS ADDRESS SETTING..... | 29 |
| 3.10 | MODBUS BAUD SETTING..... | 30 |
| 3.11 | 4-20 mA OFFSET SETTINGS..... | 31 |
| 3.11.1 | ZERO OFFSET SETTING | 31 |
| 3.11.2 | FULL-SCALE OFFSET SETTING..... | 32 |
| 3.12 | DISPLAY SCREEN CONTRAST SETTING..... | 32 |
| 3.13 | RETURN TO FACTORY DEFAULT SETTINGS..... | 33 |
| 3.14 | RESET NULL & CALIBRATION VALUES | 35 |

| | | |
|-------|---|----|
| 4 | OPERATION SETTINGS | 36 |
| 4.1 | POWERING THE DEVICE | 36 |
| 4.1.1 | POWERING OFF | 36 |
| 4.1.2 | POWERING ON | 36 |
| 4.2 | SENSOR CALIBRATION | 37 |
| 4.2.1 | NULLING THE SENSOR (AUTO NULL) | 37 |
| 4.2.2 | CALIBRATING THE SENSOR (MANUAL CAL) | 39 |
| 4.2.3 | CALIBRATING THE SENSOR (AUTO CAL) | 40 |
| 4.3 | SENSOR ALARM SETTINGS | 42 |
| 4.3.1 | SENSOR LOW ALARM SETTING | 42 |
| 4.3.2 | SENSOR LOW ALARM RISE/FALL SETTING | 43 |
| 4.3.3 | SENSOR HIGH ALARM SETTING | 43 |
| 4.3.4 | SENSOR HIGH ALARM RISE/FALL SETTING | 44 |
| 4.4 | MANUAL RESET FOR ACTIVATED LATCHING ALARMS | 44 |
| | | |
| 5 | PRODUCT MAINTENANCE | 45 |
| 5.1 | SCHEDULED MAINTENANCE | 45 |
| 5.2 | SENSOR REPLACEMENT | 46 |
| 5.3 | PRODUCT TROUBLESHOOTING | 48 |
| 5.4 | PRODUCT REPLACEMENT PARTS AND ACCESSORIES | 49 |
| | | |
| | <i>APPENDIX A: INTRODUCTION TO 4-20 MA CURRENT LOOP SIGNALS</i> | 51 |
| | | |
| | <i>APPENDIX B: MODBUS COMMUNICATIONS</i> | 53 |
| | | |
| | <i>APPENDIX C: MODBUS REGISTER MAP</i> | 55 |
| | | |
| | <i>APPENDIX D: PRODUCT WARRANTY STATEMENT</i> | 57 |
| | | |
| | <i>APPENDIX E: INFORMATION ABOUT RMA SERVICE REPAIRS</i> | 59 |
| | | |
| | <i>APPENDIX F: INFORMATION ABOUT RMA RETURNS FOR CREDIT</i> | 61 |

1 PRODUCT OVERVIEW

1.1 INTRODUCTION

The Otis Instruments, Inc. (Otis) GEN II Model OI-6000K-X-X-X-NXP-X (OI-6000K) Non-Explosion-Proof Ambient Air Toxic Gas Detector is designed to detect a wide range of toxic gases in many environments excluding classified locations. The OI-6000K features a pre-mounted strobe light and dual tone horn. The strobe light can be selected to be Red, Amber, Blue, or a Tri-Color (Green/Amber/Red) LED. The OI-6000 display screen will always show the present concentration of gas being detected by the sensor assembly.

This document is an operation manual containing diagrams and step-by-step instructions for the proper and safe installation, start-up, configuration and settings, normal operation, and product maintenance of the OI-6000K.



NOTICE

This document should be read in its entirety before the initial operation of the product.

Should a question arise during the use of the product, this document will serve as a first reference for the end-user. For inquiries beyond the information and instructions provided within this manual, contact the sales representative of this product for assistance.

1.2 PRODUCT SPECIFICATIONS

| <i>System Specifications</i> | |
|------------------------------------|---|
| Operating Voltage | +12 to +35 VDC |
| Current Draw | 1.25 Amps Maximum |
| Operating Temperature Range | -20 ⁰ C to +54 ⁰ C |
| Humidity Range | 0% to 98% Relative Humidity, Noncondensing |
| Measurement Range | Varies based on gas type |
| Response Time | Varies based on gas type |
| Protection | Power Electromagnetic Interference (EMI) Filter 4-20 mA Surge Suppression RS-485 Modbus Surge Suppression |
| Display | Transflective (sunlight-readable) 102x64 LCD Screen LED Back-Light |
| Interface | 3 Push-Buttons (MENU, ADD, SUB) LOW and HIGH Alarm Indicator LEDs |


| <i>Outputs</i> | |
|------------------------|--|
| Wired (Analog) | 4-20 mA (3-Wire) |
| Wired (Digital) | RS-485 Modbus RTU |
| Relays | Two Dry Contact Relays, Pre-wired to Strobe Light and Horn |

| <i>Mechanical Specifications</i> | |
|----------------------------------|--|
| Enclosure Materials | Fiberglass Device Enclosure with Clear Plastic Lid |
| Sensor Housing Materials | Black Polypropylene Plastic with Stainless Steel Mesh Screen |
| Product Dimensions | 16.74" T x 10.06" W x 4.31" D |
| Product Weight | |


1.3 SYSTEM DIAGRAMS

Refer to the following diagrams for identification of the external and internal system components that may be referred to in this manual.

1.3.1 EXTERNAL SYSTEM DIAGRAM

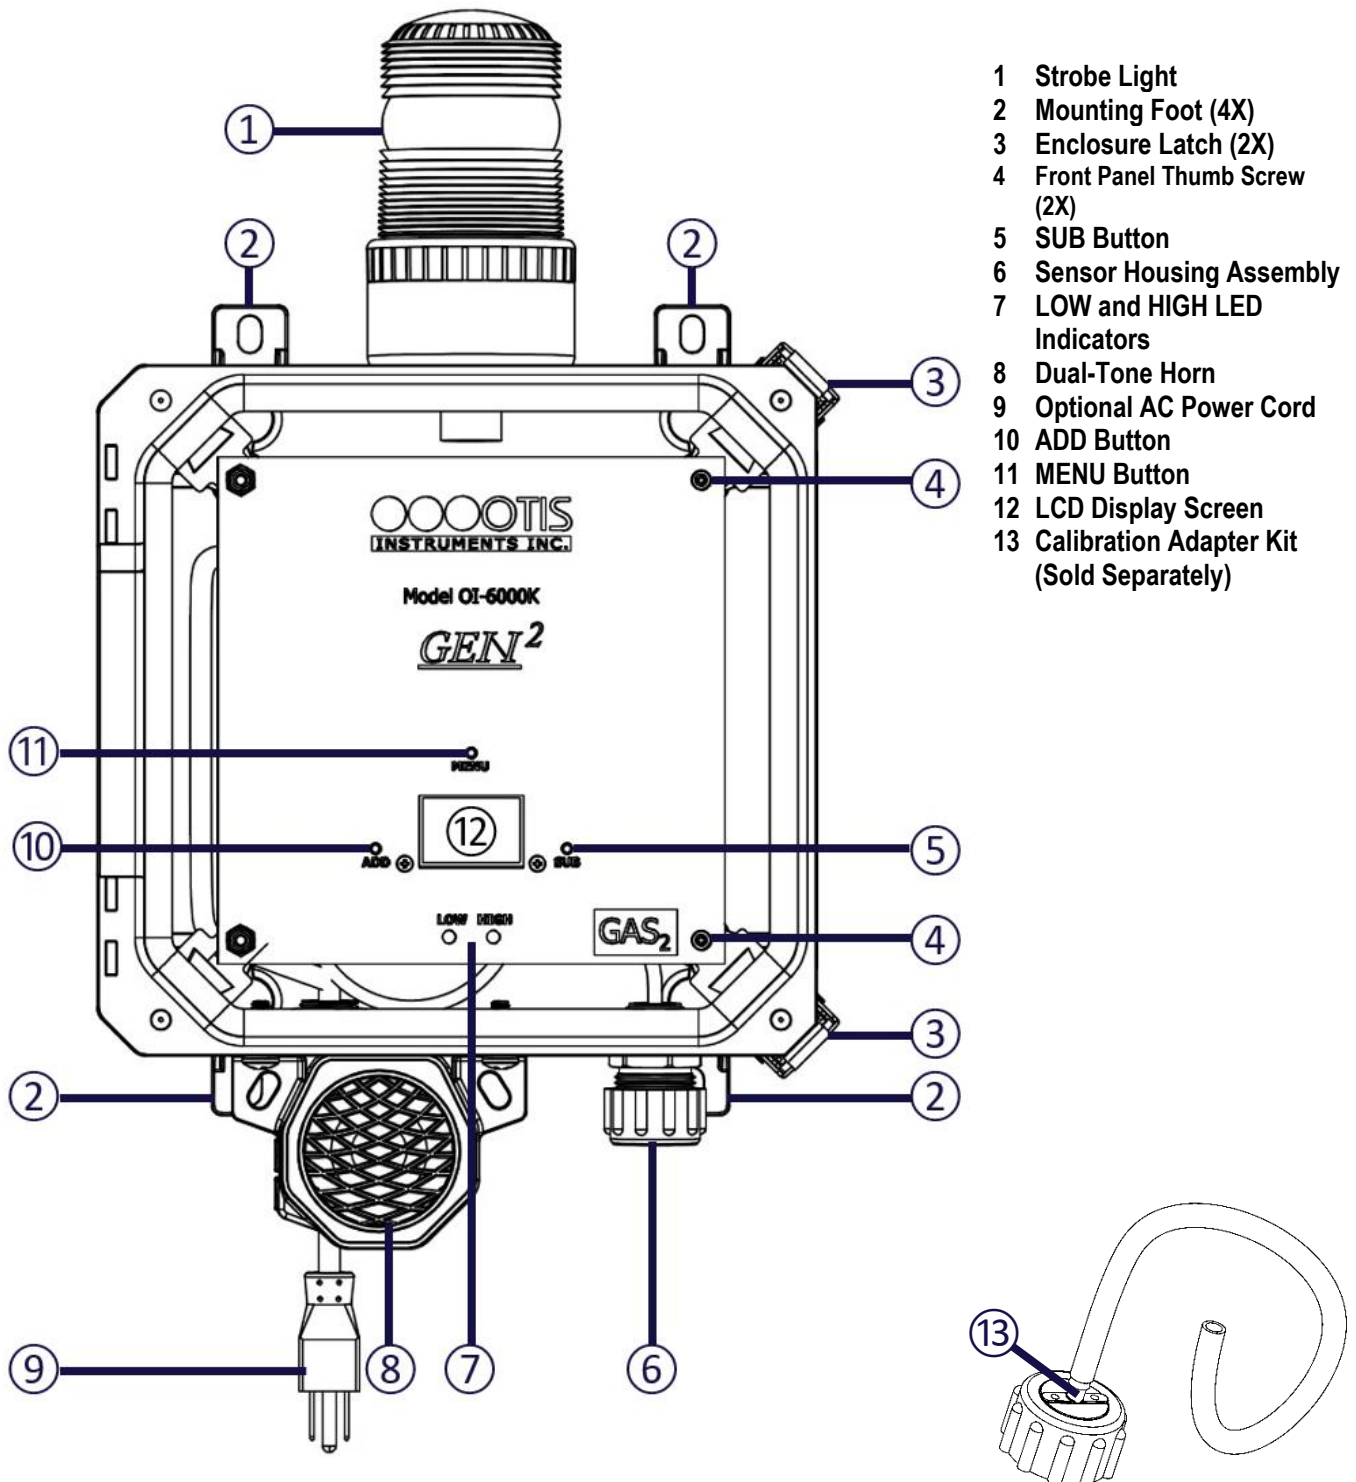


1.3.2 INTERNAL SYSTEM DIAGRAM

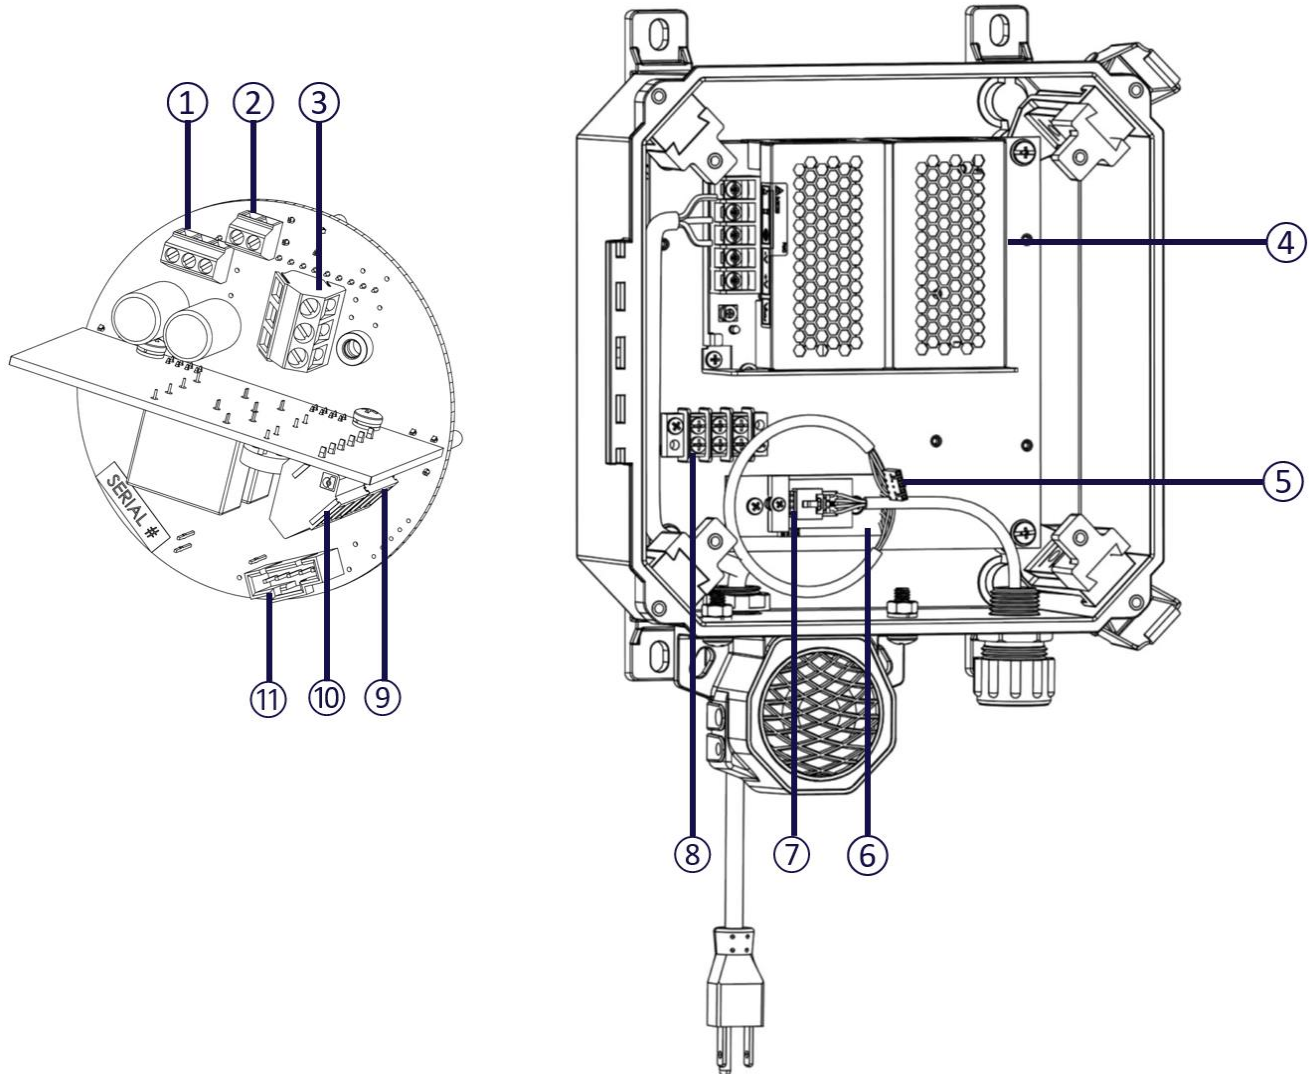

- 1 RS-485 Modbus Terminal Block
- 2 Fault Terminal Block
- 3 Power Input/4-20mA Output Terminal Block
- 4 Optional AC Power Supply
- 5 Digital Sensor Board Cable and Connector
- 6 Sensor Housing Interface Board
- 7 Sensor Interface Adapter Board
- 8 Wiring Terminal Block
- 9 Relay 1 Terminal Block
- 10 Relay 2 Terminal Block
- 11 Digital Sensor Board Socket

1.3.3 ASSEMBLY DIAGRAM

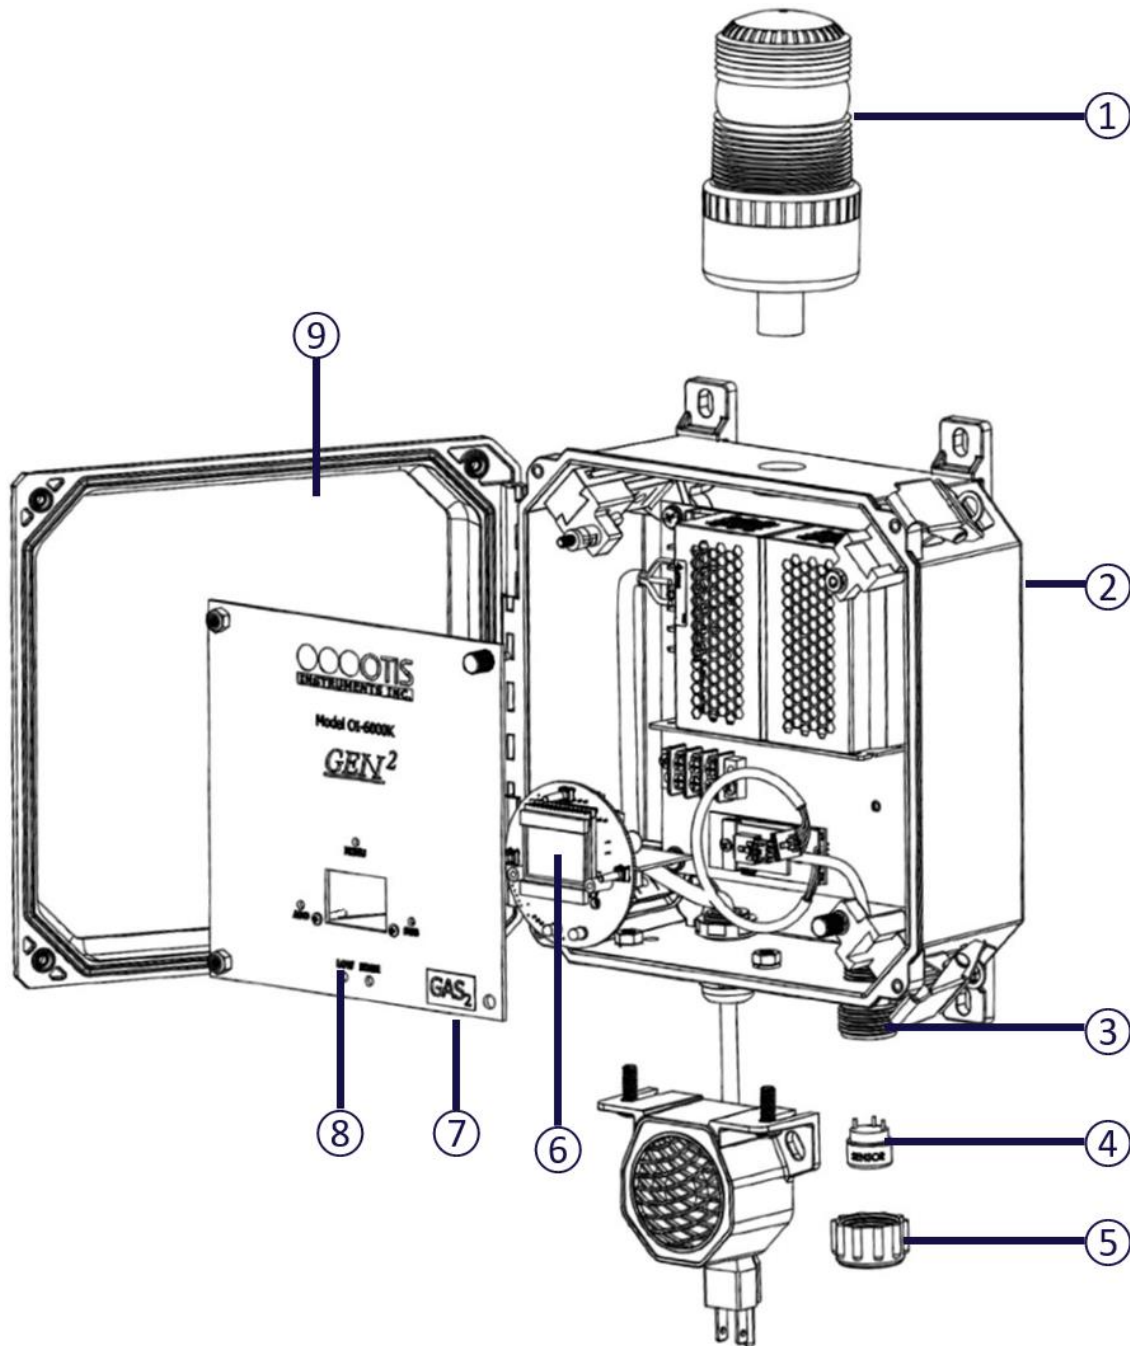

- 1 Strobe Light
- 2 Enclosure Base
- 3 Sensor Housing Base
- 4 Sensor Element
- 5 Sensor Housing Cap
- 6 Electronics Assembly
- 7 Gas Type Label
- 8 Faceplate Assembly
- 9 Enclosure Lid

2 INSTALLATION AND START-UP

2.1 PRODUCT PLACEMENT

The installation instructions, and any other information supplied by Otis, provide only basic guidelines relating to the properties of toxic gas and the effects of environmental conditions on the OI-6000K device. Sensor placement should be determined in consultation with the site safety personnel, as well as those knowledgeable of: (1) the site/facility where the equipment is being installed and (2) the potentially present gas types and their dispersion. Otis strongly recommends that the end-user consults with the appropriate third-party Health, Safety and Environmental (HSE) and Industrial Hygiene (IH) professionals to determine the final quantity and placement of your gas detection devices.

The primary purpose of the OI-6000K is to provide an early warning of the accumulation of toxic gas, in order to minimize hazards to people and property. Proper placement of the device is paramount to achieving this goal.

The following general guidelines should be considered when determining the placement of the OI-6000K:

- The unit shall NOT be placed in an environment that is classified.
- The unit shall be placed such that the position of the sensor housing is pointing downward to the ground.
- Avoid installing the unit in a location where airborne particles could cover or coat the sensor head.
- The unit should be placed in an area that will produce the highest gas concentration. Enclosed corners and stopping points of moving devices are two areas susceptible to a buildup of toxic gas.
- In order to provide an accurate representative sample of a room, care should be taken to avoid locating the unit near a room entrance, fresh air intake vent, or vehicle/generator exhaust point.
- The unit should be placed as close as physically possible to the source of the potential toxic gas leak.
- In consideration of possible ignition points, the unit should be placed between the potential leak source and ignition point.
- Consider placing the unit in a seldom used area, such as a warehouse, storage area, or other unfrequented location.
- Consider accessibility for regular calibration and other required maintenance.
- When monitoring a ventilated gas cylinder storage area, the unit should be placed near the air return vent.
- When monitoring an outdoor or open-air area, the unit should be placed near the air intake of the HVAC system of the building.
- When monitoring for the potential presence of multiple toxic gas types, the unit should be calibrated for the least cross-sensitive toxic gas.



NOTICE

These guidelines are *ONLY* intended as a general directive for the placement of the OI-6000K. This information should *NOT* serve as a complete list when considering all potential parameters for the proper location of the unit. It is *STRONGLY* advised that a third party Certified Industrial Hygienist, or other Certified Safety Professional, conduct a site survey and annotate the location and quantity of detection devices that should be installed for *EVERY* installation of *EVERY* site.

2.2 PRODUCT MOUNTING

It is recommended to mount the unit to a solid structure (such as a concrete wall, steel column, or angle iron) where a minimum of vibration will be transmitted to the unit. Alternately, a pole may be used along with a strap or a U-bolt, as long as it is rigid and of sufficient strength. Wooden structures are not recommended for mounting, as they trap moisture (which could affect sensor performance) and their mounting rigidity degrades over time (screws/bolts weaken and fall out or corrode).

Any style of bolt or screw may be used as long as it is steel and meets or exceeds the following:

- Maximum 1/4"-20 bolt or Ø1/4" screw (length varies with user need)
- Flat washers for bolts/nuts/screws
- Minimum Grade 5 (or better)
- Corrosion protection for all hardware (paint, galvanize, zinc plating, etc.)

2.3 WIRING CONFIGURATIONS

The OI-6000K has several basic wiring configurations, dependent upon the desired usage and functionality intended by the end-user. All OI-6000K units require +12 to +35 Volts of wired DC power to operate. Data communication from the device, through either the 4-20 output or the RS-485 Modbus connection, to an external location are optional. Consult the subsequent sections of wiring instructions for pertinent information and guidelines pertaining to the installation of your device.



CAUTION

- ◆ *VERIFY* that the power source is disabled before beginning the following wiring steps or performing any maintenance inside the device enclosure.
- ◆ The internal components can be static sensitive. Use caution when opening the enclosure and handling internal components.
- ◆ *DO NOT* use any metal objects or tools to remove the terminal board from the internal system.
- ◆ *VERIFY* that the label and color combination of the control board terminal exactly matches the corresponding label and color combination of the power terminal.

| <i>OI-6000K Terminal Block Wire Gauges</i> | |
|--|-------------------|
| <i>Terminal Block</i> | <i>Wire Gauge</i> |
| Power Terminal | Min: 26 AWG |
| Relay 1 & 2 Terminal | Max: 14 AWG |
| Modbus Terminal | Min: 26 AWG |
| Fault Terminal | Max: 16 AWG |

AWG: American Wire Gauge

2.3.1 OPENING THE ENCLOSURE

To prepare the OI-6000K for installation, you must first open the device, exposing the control board and its components for wiring.

1. Open the enclosure lid by unlatching the right-side enclosure latches.
2. Using your thumb and forefinger, loosen the front panel thumbscrews that secure the faceplate and electronics assembly to the enclosure.
3. Open the faceplate to expose the internals of the electronics which allows access to the wiring terminals.



NOTICE

Disconnecting the sensor connector plug from the digital sensor board will allow for the faceplate and electronics assembly to swing open further. Disconnecting the digital sensor board may provide ease in accessing the control board terminals for wiring. If this step is performed, it is essential that all connections are rejoined before securing the faceplate and electronics assembly back to the enclosure.


2.3.2 CONNECTING POWER

The AC model OI-6000K comes with a standard power cord that is plugged into a regular wall outlet, you may skip the below DC wiring instructions and advance to the 4-20 wiring if that functionality is desired. To provide DC power to the OI-6000K, you will need to connect the power cable from the sensor terminal block on an Otis monitor, or alternate user supplied power source, to the OI-6000K power terminal block located on the backplane of the enclosure. An electrician will need to install the proper cord grip for the cabling being used. Refer to the following instructions for how to wire your device:

On the GEN II Model OI-6000K Detector:

1. Feed the power wires through the electrician installed cord grip and into the enclosure.
2. Locate the power terminal block on the backplane and complete the following:
 - a. Connect the positive supply (RED) wire to the screw terminal opposite the preinstalled RED wire on the terminal block that connects to the back of the control board.
 - b. Connect the ground (BLACK) wire to the screw terminal opposite the preinstalled BLACK wire on the terminal block that connects to the back of the control board.

| CUSTOMER POWER SUPPLY WIRING | | OI-6000K BACKPLANE TERMINAL BLOCK | |
|------------------------------|--------------|-----------------------------------|--------------|
| +12 to +35 VDC | RED | +12 to +35 VDC | RED |
| GND | BLACK | GND | BLACK |
| 4-20 mA | | 4-20 mA | |

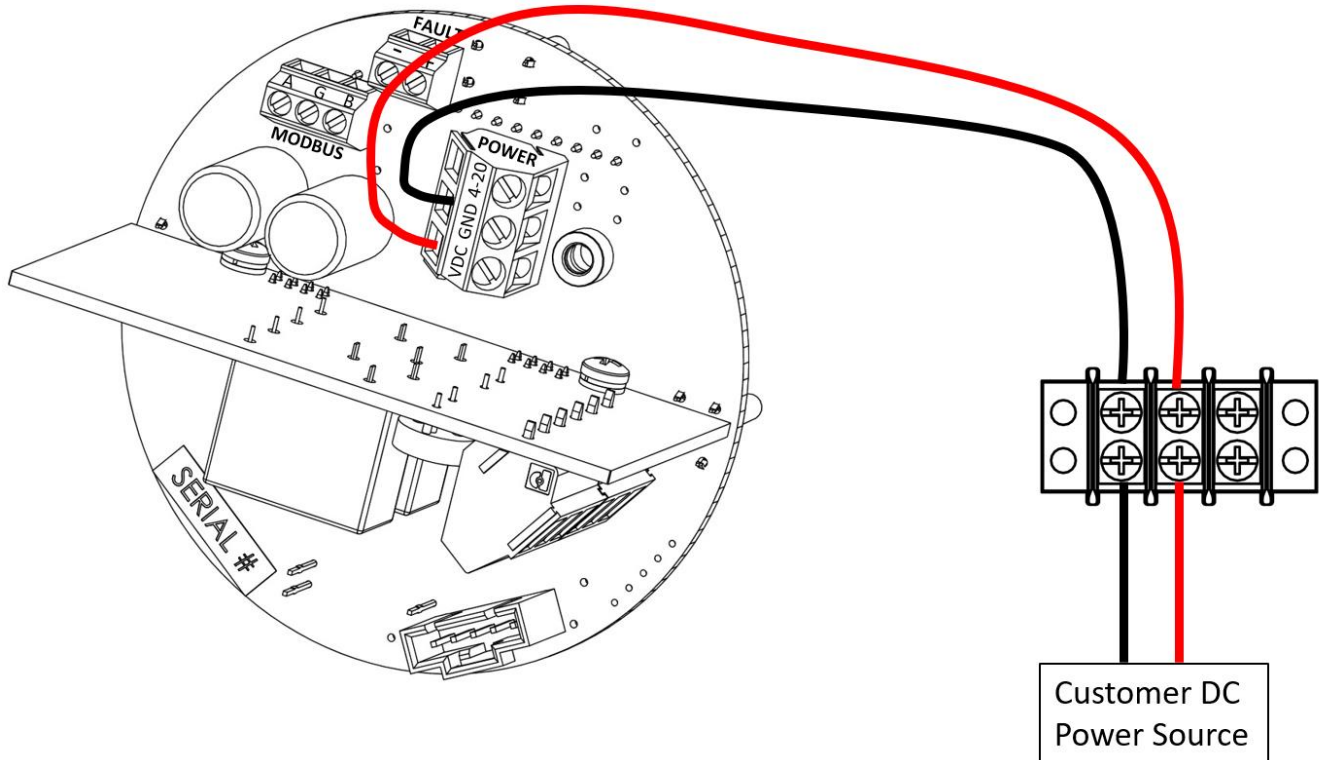

NOTICE

Wiring power to the device is the *ONLY* requirement for the OI-6000K to operate. With the provision of power, the unit will function normally, indicating the presence of toxic gas at the sensor and providing the gas level reading on the display screen. To utilize the added functionality of the device, additional wiring is necessary. If an Otis Monitor is not used, the OI-6000K can be powered from any +12 to +35 VDC power supply that can supply at least 1.250 Amps.

2.3.3 CONNECTING 4-20 MA OUTPUT

To utilize the 4-20 mA wired analog output feature of the OI-6000K, you will need to connect the signal cable from your monitoring device to the OI-6000K terminal block located on the backplane as well as a common ground reference wire. Refer to the following instructions for how to wire your device:

On the GEN II Model OI-6000K Detector:

1. Feed the signal wire through the electrician installed cord grip and into the enclosure.




NOTICE

The power and signal wires may be conjoined as a 3-wire cable, incorporating the power (RED), ground (BLACK), and signal (GREEN) wires all into one jacketed cable.

2. Locate the terminal block on the backplane and complete the following:
 - a. Connect the signal (GREEN) wire to the “4-20 mA” terminal.
 - b. Connect the common ground reference wire to the DC power source ground terminal.

| CUSTOMER MONITORING DEVICE | | OI-6000K BACKPLANE TERMINAL BLOCK | |
|----------------------------|-------|-----------------------------------|-------|
| 4-20 mA | GREEN | 4-20 mA | GREEN |
| Ground | BLACK | Ground | BLACK |

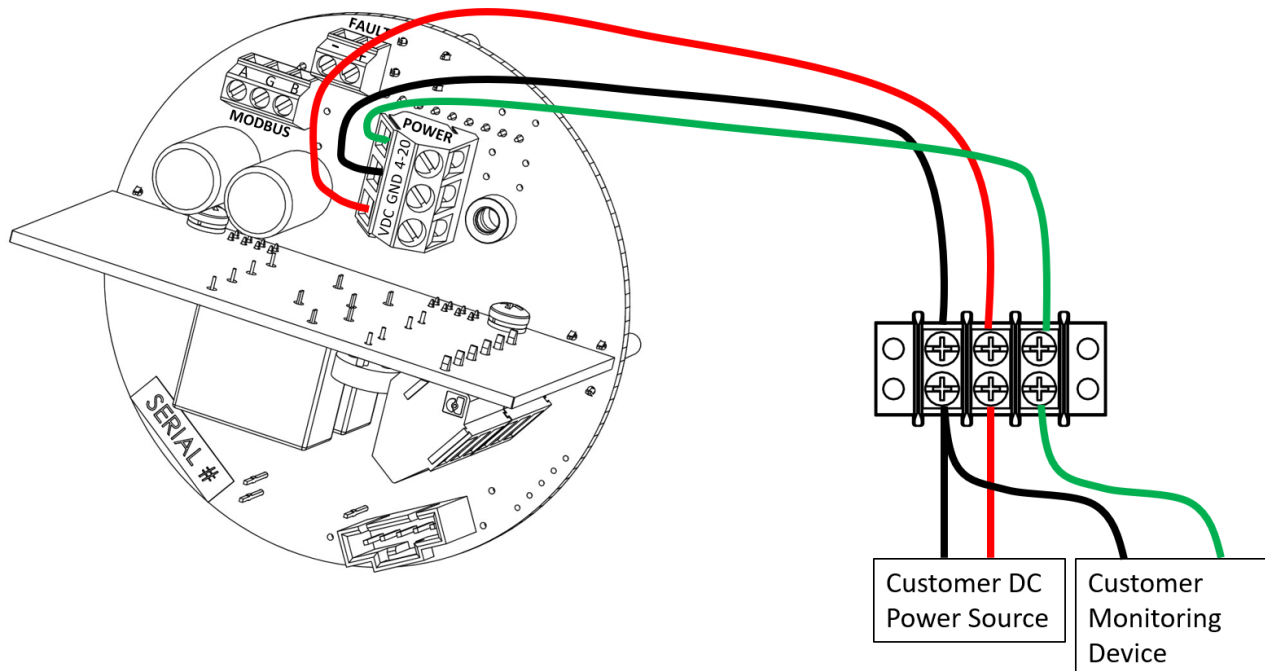

2.3.4 CONNECTING RS-485

The OI-6000K supports Modbus RTU over a RS-485 link. To integrate your device with RS-485 Modbus data communications, you will need to connect the Modbus cable from your Otis Monitor RS-485 input terminal block to the OI-6000 RS-485 output terminal block located on the control board of the unit. Refer to the following instructions for how to wire your device:


On the GEN II Model OI-6000K Detector:

1. Feed the RS-485 cable through a cord grip and into the enclosure.
2. Locate the RS-485 output terminal block on the control board and complete the following:
 - a. Connect the RS-485 B (BROWN) wire to the “B” terminal.
 - b. Connect the ground (WHITE) wire to the “GND” terminal.
 - c. Connect the RS-485 A (YELLOW) wire to the “A” terminal.

On the Otis Monitor:

1. Feed the RS-485 cable through a cord grip and into the enclosure.
2. Locate the RS-485 input terminal block on the control board and complete the following:
 - a. Connect the RS-485 B (BROWN) wire to the “B” terminal.
 - b. Connect the ground (WHITE) wire to the “GND” terminal.
 - c. Connect the RS-485 A (YELLOW) wire to the “A” terminal.

| OTIS MONITOR RS-485 TERMINAL | | OI-6000K RS-485 TERMINAL | |
|---------------------------------|--------|-----------------------------|--------|
| A | YELLOW | A | YELLOW |
| GND | WHITE | GND | WHITE |
| B | BROWN | B | BROWN |

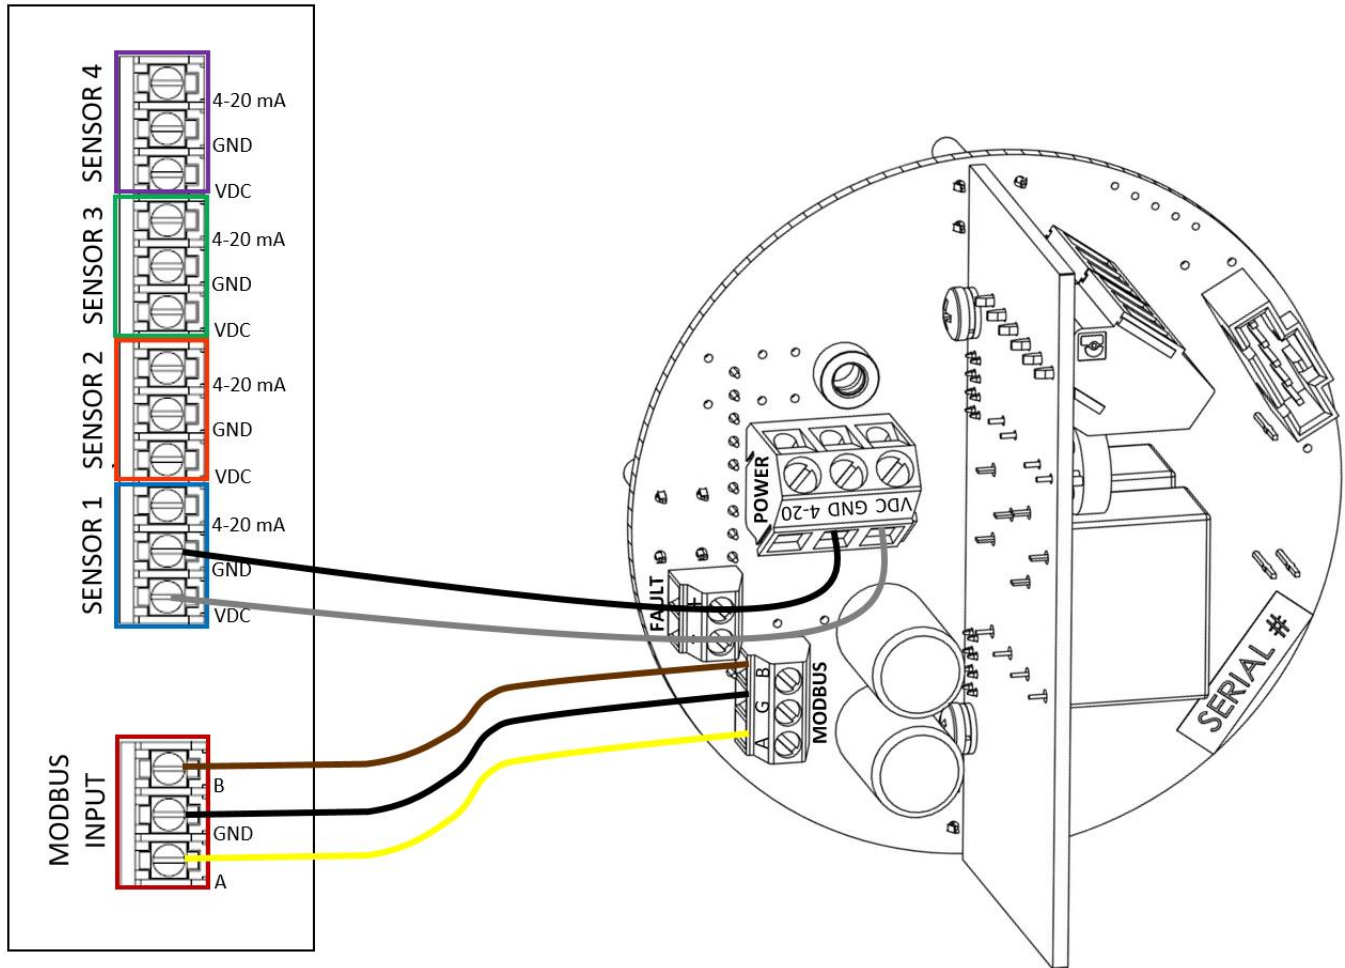

NOTICE

If an Otis Monitor is not used, the OI-6000K can be connected to a Programmable Logic Controller (PLC) for RS-485 Modbus data communications. For integration and setup, refer to the Modbus Register Map found in Appendix C of this manual.

2.3.5 CONNECTING RELAYS/ALARMS

The OI-6000K relays are used to power and control the included strobe light and dual-tone horn. The strobe light and dual-tone horn are prewired from the factory and require no wiring by the end user. The following instructions are for reference if the strobe light or dual-tone horn need to be replaced in the field. The first section details wiring the single color, OI-481-X, strobe to the relays. The second and third sections detail connecting the tri-color, OI-481-RGA, strobe to the relays in non-O₂ and O₂ configurations.



NOTICE

Relays are protected by replaceable 4 Amp fuses.
The two protective fuses must only be replaced with *OI-FUSE-4A-250*.


2.3.5.1 CONNECTING OI-481-R/OI-481-A/OI-481-B STROBE LIGHT AND OI-488 HORN

On the OI-6000K Detector:

1. Locate the wiring terminal block on the backplane of the enclosure and complete the following:
 - a. Connect a RED jumper wire to the positive supply terminal.
 - b. Connect the BLACK wire from the OI-481-X to the negative supply terminal.
 - c. Connect the BLACK wire from the OI-488 to the negative supply terminal as well.
2. Locate the Relay 1 terminal block on the radio/relay board and complete the following:
 - a. Connect a BLUE jumper wire to the "COM" terminal.
 - b. Connect the RED wire from the OI-481-X to the "NO" terminal.
3. Locate the Relay 2 terminal block on the radio/relay board and complete the following:
 - a. Connect the RED jumper to the "COM" terminal.
 - b. Connect the BLUE jumper to the "COM" terminal as well.
 - c. Connect the RED wire from the OI-488 to the "NO" terminal.

CONNECTING OI-481-R/OI-481-A/OI-481-B STROBE LIGHT AND OI-488 HORN

| BACKPLANE WIRING TERMINAL BLOCK | | OI-6000K RELAY 1 TERMINAL | | OI-6000K RELAY 2 TERMINAL | |
|------------------------------------|---------------------|------------------------------|-------------------|------------------------------|-----------------|
| NEGATIVE | OI-481-X BLACK WIRE | NC | | NC | |
| | OI-488 BLACK WIRE | | | | |
| POSITIVE | RED | NO | OI-481-X RED WIRE | NO | OI-488 RED WIRE |
| | | | | | |
| | | COM | BLUE | COM | BLUE |
| | | | | | RED |

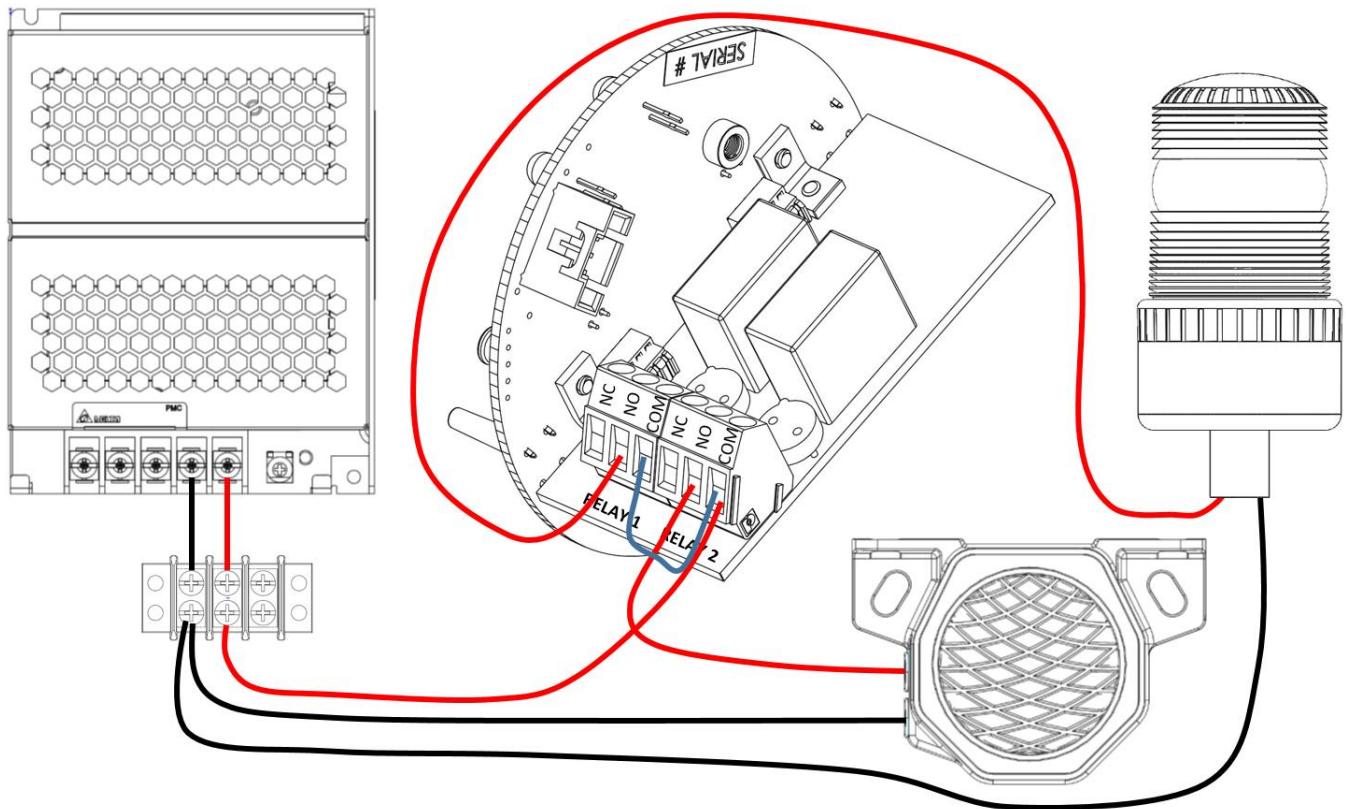


2.3.5.2 CONNECTING OI-481-RGA STROBE LIGHT AND OI-488 HORN – NON-O₂ SENSORS

On the OI-6000K Detector:

1. Locate the wiring terminal block on the backplane of the enclosure and complete the following:
 - a. Connect a RED jumper wire to the positive supply terminal.
 - b. Connect the BLACK wire from the OI-481-RGA to the negative supply terminal.
 - c. Connect the BLACK wire from the OI-488 to the negative supply terminal as well.
2. Locate the Relay 1 terminal block on the radio/relay board and complete the following:
 - a. Connect a BLUE jumper wire to the “COM” terminal.
 - b. Connect the YELLOW wire from the OI-481-RGA to the “NO” terminal.
 - c. Connect the GREEN & BLUE wire from the OI-481-RGA to the “NC” terminal.
3. Locate the Relay 2 terminal block on the radio/relay board and complete the following:
 - a. Connect the RED jumper to the “COM” terminal.
 - b. Connect the BLUE jumper to the “COM” terminal as well.
 - c. Connect the RED wire from the OI-481-X to the “NO” terminal.
 - d. Connect the RED wire from the OI-488 to the “NO” terminal as well.

CONNECTING OI-481-RGA STROBE LIGHT AND OI-488 HORN – NON-O2 SENSORS

| BACKPLANE WIRING TERMINAL BLOCK | | OI-6000K RELAY 1 TERMINAL | | OI-6000K RELAY 2 TERMINAL | |
|------------------------------------|-----------------------|------------------------------|------------------------------|------------------------------|---------------------|
| NEGATIVE | OI-481-RGA BLACK WIRE | NC | OI-481-RGA GREEN & BLUE WIRE | NC | |
| | OI-488 BLACK WIRE | | | | |
| POSITIVE | RED | NO | OI-481-RGA YELLOW WIRE | NO | OI-481-RGA RED WIRE |
| | | | | | OI-488 RED WIRE |
| | | COM | BLUE | COM | BLUE |
| | | | | | RED |

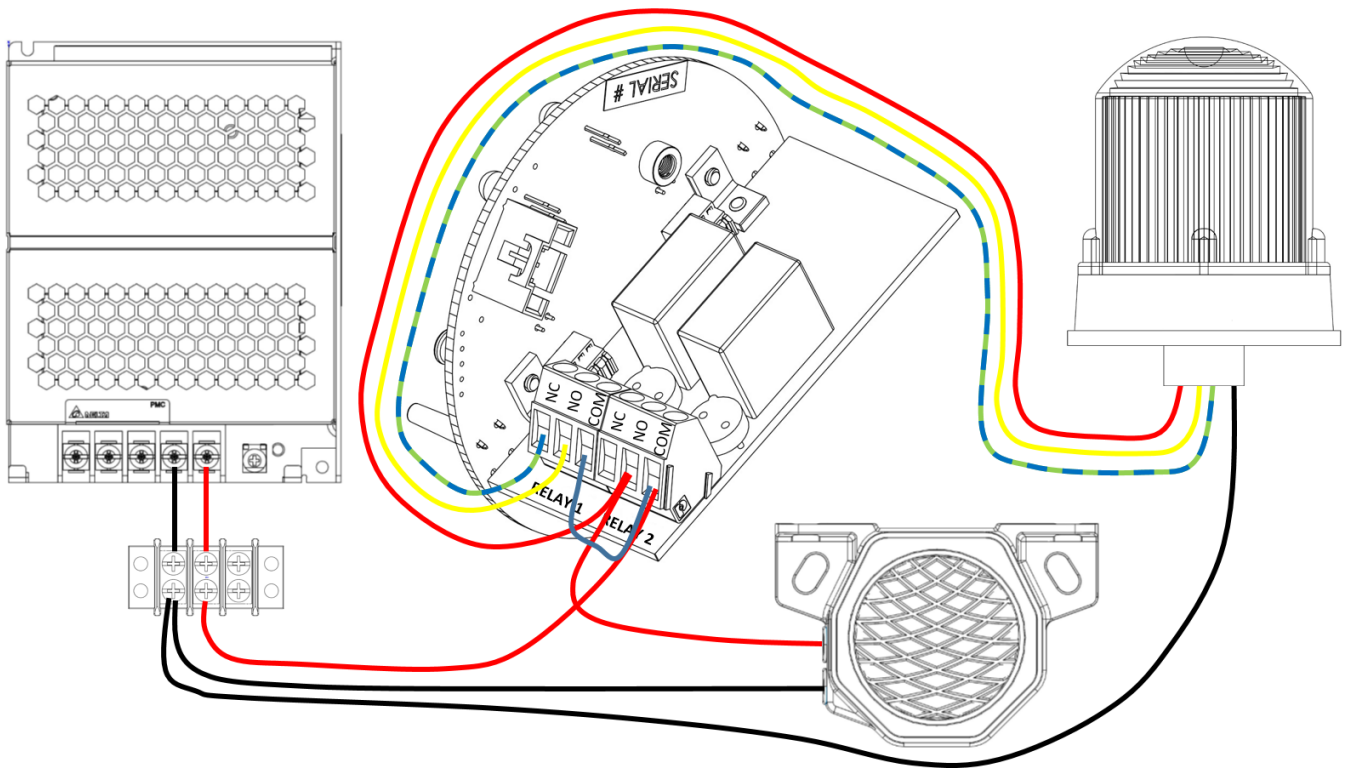


2.3.5.3 CONNECTING OI-481-RGA STROBE LIGHT AND OI-488 HORN – O₂ SENSORS

On the OI-6000K Detector:

1. Locate the wiring terminal block on the backplane of the enclosure and complete the following:
 - a. Connect a RED jumper wire to the positive supply terminal.
 - b. Connect the BLACK wire from the OI-481-RGA to the negative supply terminal.
 - c. Connect the BLACK wire from the OI-488 to the negative supply terminal as well.
2. Locate the Relay 1 terminal block on the radio/relay board and complete the following:
 - a. Connect a BLUE jumper wire to the “COM” terminal.
 - b. Connect the YELLOW wire from the OI-481-RGA to the “NO” terminal.
 - c. Connect the GREEN & BLUE wire from the OI-481-RGA to the “NC” terminal.
3. Locate the Relay 2 terminal block on the radio/relay board and complete the following:
 - a. Connect the RED jumper to the “COM” terminal.
 - b. Connect the BLUE jumper to the “NC” terminal.
 - c. Connect the RED wire from the OI-481-X to the “NO” terminal.
 - d. Connect the RED wire from the OI-488 to the “NO” terminal as well.

CONNECTING OI-481-RGA STROBE LIGHT AND OI-488 HORN – O2 SENSORS

| BACKPLANE WIRING TERMINAL BLOCK | | OI-6000K RELAY 1 TERMINAL | | OI-6000K RELAY 2 TERMINAL | |
|------------------------------------|-----------------------|------------------------------|------------------------------|------------------------------|---------------------|
| NEGATIVE | OI-481-RGA BLACK WIRE | NC | OI-481-RGA GREEN & BLUE WIRE | NC | BLUE |
| | OI-488 BLACK WIRE | | | | |
| POSITIVE | RED | NO | OI-481-RGA YELLOW WIRE | NO | OI-481-RGA RED WIRE |
| | | | | | OI-488 RED WIRE |
| | | COM | BLUE | COM | RED |

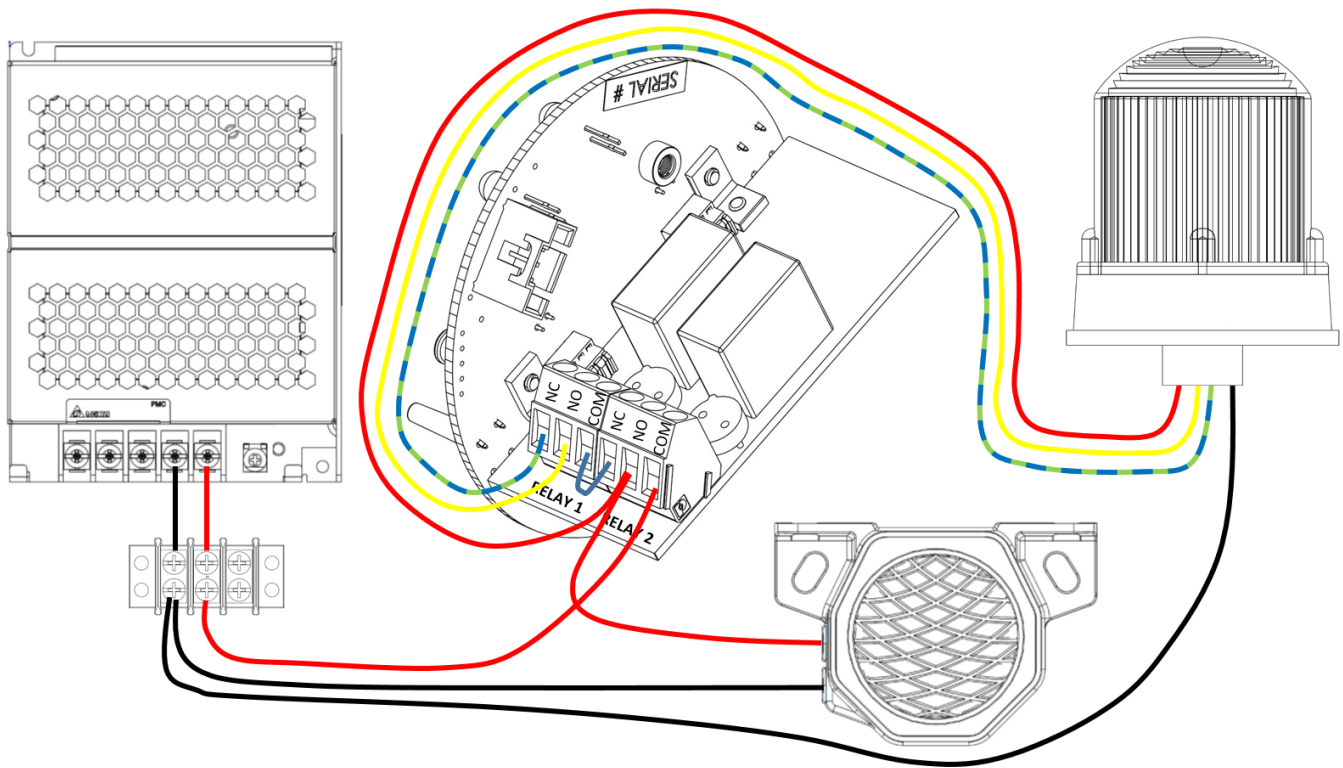

2.3.6 CONNECTING THE FAULT TERMINAL

The fault terminal is used to provide indication of a device failure. The fault terminal is shipped configured as a normally-closed (NC), or fail-safe, configuration, terminating power to the external fault device when prompted, changing this behavior is detailed in the product settings and configuration section of this manual. Unlike the optional relay terminals, the fault terminal is a wet-contact, requiring only the power and ground wires of the external fault device to be wired during installation. Refer to the following instructions for how to wire your device:


On the external fault device (light/horn):

1. Locate the power (RED) and ground (BLACK) wires on the alarming device.

On the GEN II Model OI-6000K Detector:

1. Feed the alarming device wires through a cord grip and into the enclosure.
2. Locate the fault terminal block on the control board and complete the following:
 - a. Connect the external fault device power (RED) wire to the “+” terminal.
 - b. Connect the external fault device ground (BLACK) wire to the “-” terminal.

| EXTERNAL FAULT DEVICE | | OI-6000K FAULT TERMINAL | |
|-----------------------|--------------|-------------------------|--------------|
| PWR | RED | + | RED |
| GND | BLACK | - | BLACK |

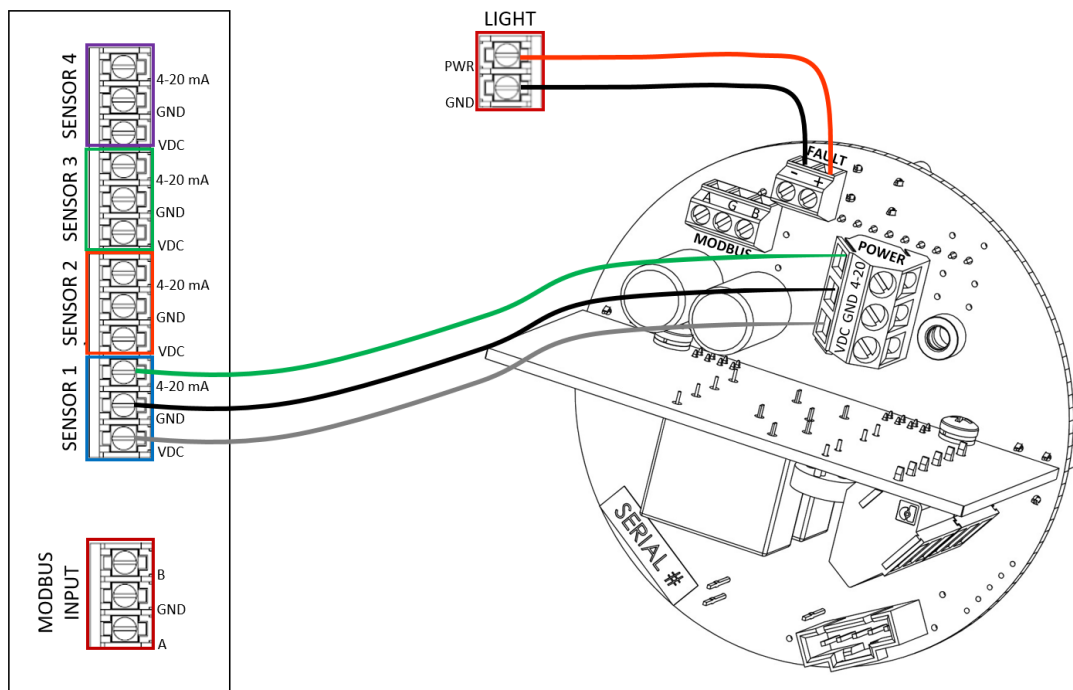


2.3.7 CLOSING THE ENCLOSURE

1. Close the faceplate carefully ensuring no wires are trapped or pinched between the faceplate and enclosure.
2. Using your thumb and forefinger, tighten the front panel thumbscrews finger tight.
3. Close the enclosure lid and secure shut with the right side latches.

2.4 SYSTEM START-UP


After the enclosure is closed and power is applied, the unit will start automatically and begin its 1-minute warmup period. During warmup, the display will show a countdown of the time remaining until the system start-up is complete. The Otis logo and the unit information will also show on the display screen during start-up.

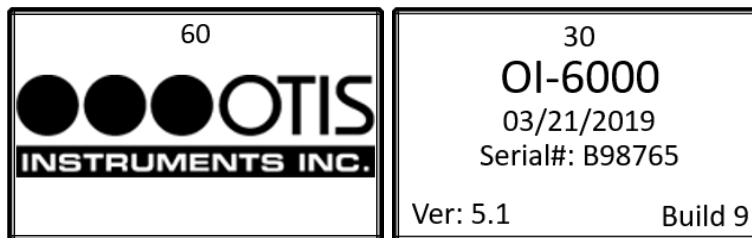

At the end of the countdown, the device will be in normal operating mode.


2.5 NORMAL OPERATING MODE

During normal operating mode, the OI-6000K continuously samples the air and updates the measured concentration of the target gas on the display screen. The display, when in normal operation, appears as shown below.

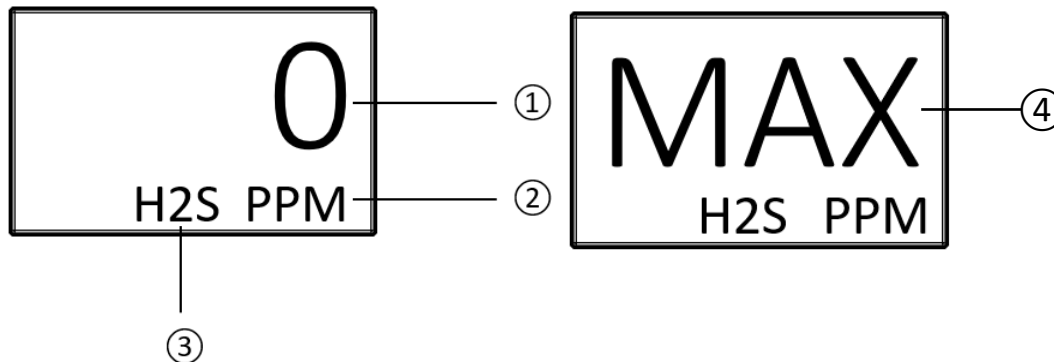

- 1 Measured gas concentration (reading)
- 2 Gas concentration unit of measure
- 3 Sensor element gas type
- 4 Readings above full scale show as *MAX* and the 4-20 output is set to 25 mA

In the event of a device failure, the unit will alternate between the normal operating screen and a fault screen on the display, in 5 second intervals, until the fault has been cleared, or is corrected. The fault code, located in the bottom-left corner of the display, appears on both screens. The unit continuously registers that the system is in fault, so that even with at-a-glance instrument checks in the field, it can be seen. When the fault is corrected, the unit will return to normal operating mode.

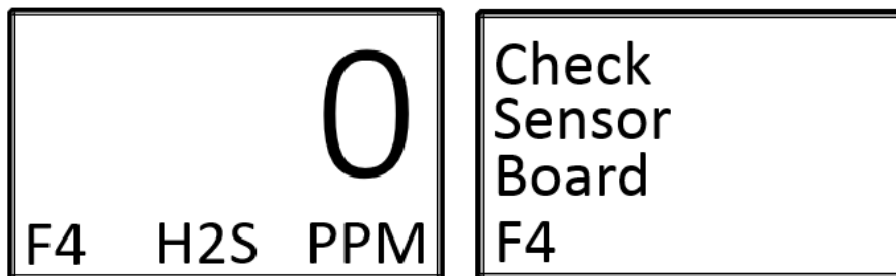

For a list of the fault codes and warning symbols of the OI-6000K, and their associated meaning, refer to the Product Troubleshooting section of this manual.

Both system menus are accessible from the normal operating mode. To access the product settings and configuration menu, *press and hold* the *MENU* button, for approximately 6 seconds, until the menu is activated and open on the display screen. To access the operation settings menu from the normal operating screen, press the *MENU* button once and the menu will open and show on the display.



NOTICE

After 5 minutes of no interaction with the device, the unit will automatically return to normal operating mode.

3 PRODUCT SETTINGS AND CONFIGURATION

The product settings and configuration menu allows the end-user to tailor the device settings to meet their required specifications and/or site conditions.

The product settings and configuration menu consist of the following screens:

- Relay Test
- System Information
- Null/Calibration Timers
- Unit Info
- Relay 1: Latching/Non-Latching Setting
- Relay 2: Latching/Non-Latching Setting
- Relay 1: Fail-Safe Setting
- Relay 2: Fail-Safe Setting
- Fault Terminal Fail-Safe Setting
- Calibration Method
- RS-485 Modbus Address Setting
- RS-485 Modbus Baud Setting
- 4-20 mA Offset Settings
 - Zero Offset Setting
 - Full-Scale Offset Setting
- Display Screen Contrast Setting
- Return to Factory Default Settings
- Reset Null and Calibration Values Only

While the device is in normal operating mode, *press and hold* the *MENU* button, for approximately 6 seconds, until the product settings and configuration menu is activated and open on the display screen.

3.1 RELAY TEST

The relay test simulates a gas level reading, indicating the presence of a toxic gas at the sensor. The relay test is used to ensure the proper functionality of the relay settings on the monitor. The test can also be used to simulate emergency/safety drills onsite.



NOTICE

The triggering of relays from the detector will also simulate low and high level alarm relays at the monitor. Monitors cannot distinguish between real and simulated data received. When the monitor relays are triggered, alarming devices will perform as intended, initiating emergency procedures as if a harmful or toxic gas was actually present. To prevent this from occurring, set the monitor to calibration mode before performing the relay test. Calibration mode of the monitor will allow the transmission of the data, without the activation of the monitor relays. Consult the Sensor Calibration section of this manual for instructions on how to perform this procedure.

It is recommended that a relay test be conducted *EVERY* 30 days, alongside the maintenance and calibration of the detector.

3.1.1 PERFORMING THE RELAY TEST

The relay test gas level reading can be increased or decreased in increments of 5% of the sensor scale, up to 100% of the sensor scale.




1. Press the *ADD* button until the low and high alarm levels are reached and the relay(s) are triggered to light all visual alarm(s) and sound all audio alarm(s) on the monitor.
2. Once all relays have been tested and the test is complete, press the *SUB* button to return the relay test reading back to zero and to deactivate the monitor alarm(s).
3. Press the *MENU* button to advance to the System Information screen.

3.2 SYSTEM INFORMATION

The system information screen allows the end-user to view the following information:

- The scale of the sensor element.
- The supply voltage to the sensor assembly.
- The voltage value the sensor was reading when nulled in Volts.
- The current voltage value the sensor element is reading in Volts.

This screen is for informational purposes only.

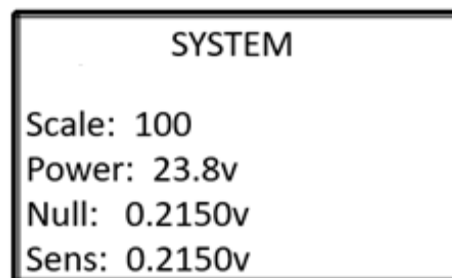


1. Press the *MENU* button to advance to the Null/Calibration Time Information screen.

3.3 NULL/CALIBRATION TIMER INFORMATION

The null/calibration time information screen allows the end-user to view the following information:

- The days since the sensor assembly was last nulled, only updates while the unit is turned on.
- The days since the sensor assembly was last calibrated, only updates while the unit is turned on.
- The calibration number of the sensor, used for diagnostic purposes.

This screen is for informational purposes only.

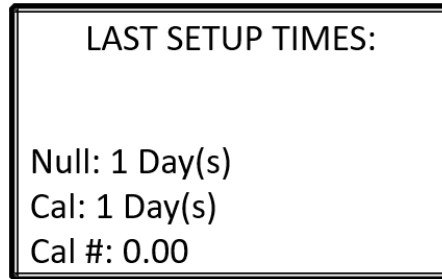


1. Press the *MENU* button to advance to the Unit Information screen.\

3.4 UNIT INFORMATION

The unit information screen allows the end-user to view the following information:

- The date of manufacture of the sensor assembly.
- The serial number of the sensor assembly.

This screen is for informational purposes only.

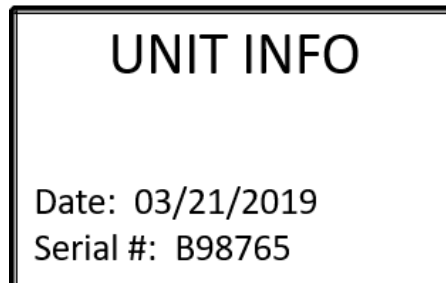

1. Press the *MENU* button to advance to the Latching and Non-Latching Relay setting screen.


3.5 LATCHING AND NON-LATCHING RELAY SETTINGS

Relay 1 and Relay 2 can be set to latching or non-latching. Relays set to non-latching will automatically deactivate when the detected gas level falls below the corresponding alarm setting. Conversely, latching relays, once activated, *MUST* be manually reset at the device, regardless of the change in gas detection level readings.

The factory default settings on the OI-6000K for Relay 1 and Relay 2 are non-latching. During installation and setup, Relay 1 and Relay 2 are commonly customized as the following:

| Common Relay 1 and Relay 2 Settings | | |
|-------------------------------------|---------------|-----------------------|
| Relay | Alarm Setting | Latching/Non-Latching |
| Relay 1 | Low | Non-Latching |
| Relay 2 | High | Latching |

3.5.1 RELAY 1: LATCHING/NON-LATCHING SETTING

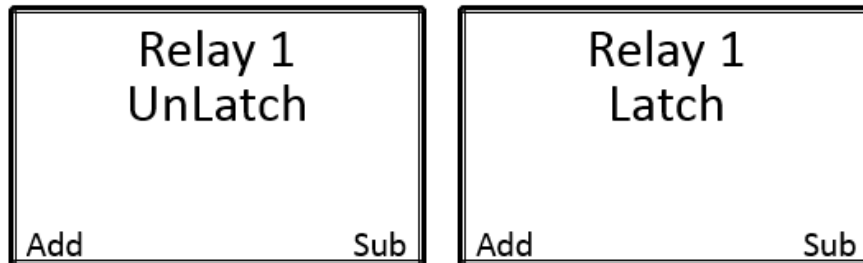


1. Use the *ADD* and *SUB* buttons to toggle between the “UnLatch” and “Latch” options.
2. Press the *MENU* button to select the desired setting and to advance to the Relay 2 latching/non-latching setting screen.



NOTICE

- ◆ For non-latching alarms, the alarms will *NOT* deactivate until the gas level reading at the sensor has fallen 10% below the alarm set-point.
- ◆ For latching alarms, the gas level reading *MUST* be below the alarm set-point before the alarm can be deactivated.

3.5.2 RELAY 2: LATCHING/NON-LATCHING SETTING

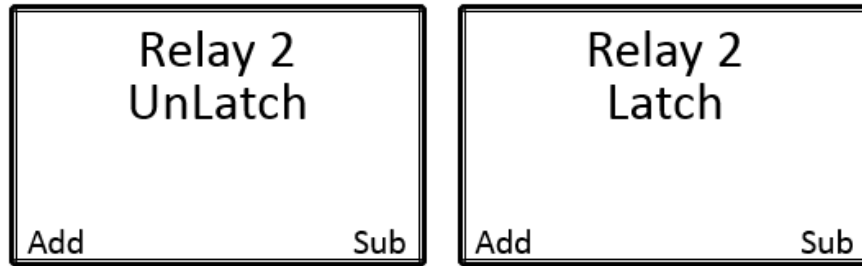

1. Use the *ADD* and *SUB* buttons to toggle between the “UnLatch” and “Latch” options.
2. Press the *MENU* button to select the desired setting and to advance to the Relay 1 fail-safe setting screen.

3.6 RELAY FAIL-SAFE SETTING

From a safety perspective, any unknown situation must be considered potentially hazardous. When a stand-alone gas detector is unable to detect gas, an unknown condition is created and precautions must be taken to prevent personal injury or loss of life. This means that the device must be able to alert the end-user that it is no longer fully operational. This safety function is made possible by the fault terminal. For more information about the fault terminal and for instructions on how to wire your device, refer to the Connecting the Fault Terminal section of this manual.

Site specific circumstances may prevent the use of the fault terminal, leading to potentially dangerous situations without end-user notification. In response, the OI-6000K provides a relay fail-safe setting to enhance the safety protection provided when the fault terminal cannot be used.

The relay fail-safe setting reverses the behavior of the relays and allows a deactivated relay to serve as a warning of a potentially hazardous event. In fail-safe mode, the relays are activated upon device start-up and deactivated during alarm conditions and when the device is turned off. Some device failures, such as loss of power and firmware corruption, will also deactivate the relay.



NOTICE


For maximum safety, the fault terminal *MUST* be used. A fail-safe relay will *NOT* notify the user of all potential device failures. The fail-safe setting should *ONLY* be enabled to provide enhanced safety protection when the fault terminal *CANNOT* be used.

The factory default settings on the OI-6000K for Relay 1 and Relay 2 fail-safe are No (Off).

If the fault terminal cannot be used, Otis Instruments recommends one of the following configurations:


| <i>Recommended Configurations for Relay Fail-Safe Setting</i> | | | |
|---|----------------------|------------------|--|
| <i>Power Source</i> | <i>Relay Wiring</i> | <i>Fail-Safe</i> | <i>Outcome</i> |
| OI-6000K | Normally-Closed (NC) | No (Off) | Normal Operation: Closed Alarm Activation: Open |
| OI-6000K | Normally-Open (NO) | Yes (On) | Normal Operation: Closed Alarm Activation: Open |
| External Power Supply | Normally-Closed (NC) | Yes (On) | Normal Operation: Open Alarm Activation: Closed |
| External Power Supply | Normally-Open (NO) | Yes (On) | Normal Operation: Closed Alarm Activation: Closed |

3.6.1 RELAY 1: FAIL-SAFE SETTING

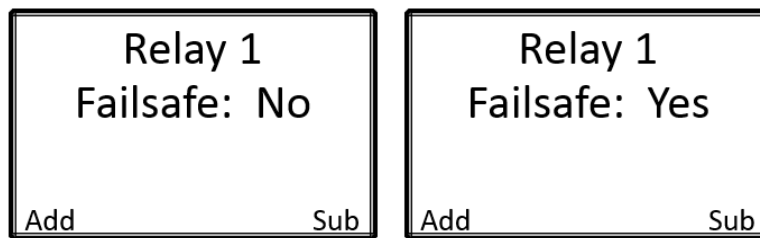

1. Use the *ADD* and *SUB* buttons to select the desired fail-safe setting for Relay 1. Select “Yes” to turn the fail-safe setting on, or select “No” to leave the fail-safe setting off.
2. Press the *MENU* button to select the desired setting and to advance to the Relay 2 fail-safe setting screen.

3.6.2 RELAY 2: FAIL-SAFE SETTING

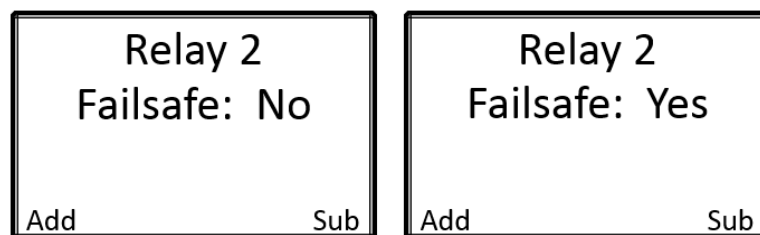


1. Use the *ADD* and *SUB* buttons to select the desired fail-safe setting for Relay 2. Select “Yes” to turn the fail-safe setting on, or select “No” to leave the fail-safe setting off.
2. Press the *MENU* button to select the desired setting and to advance to the Fault Terminal Fail-Safe setting screen.

3.7 FAULT TERMINAL FAIL-SAFE SETTING

The Fault Terminal Fail-Safe status behavior can be adjusted to either activate during a fault condition or deactivate during a fault condition. The default setting is to deactivate during a fault condition, this setting should only be adjusted if the opposite behavior is desired.

3.7.1 FAULT TERMINAL: FAIL-SAFE SETTING

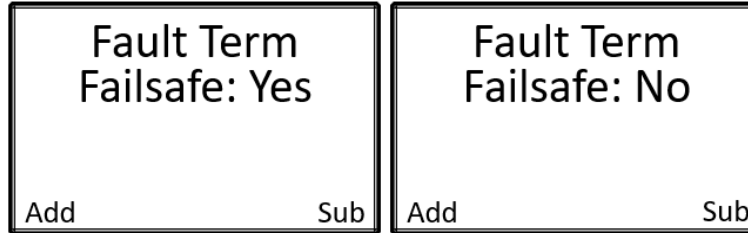


1. Use the *ADD* and *SUB* buttons to select the desired fail-safe setting for the Fault Terminal. Select “Yes” to turn the fail-safe setting on, or select “No” to turn the fail-safe setting off.
2. Press the *MENU* button to select the desired setting and to advance to the Calibration Method setting screen.

3.8 CALIBRATION METHOD

The calibration method selection allows you to choose how you calibrate the sensor element. Manual calibration is the default method for all gas types.

- Manual calibration lets you use the *ADD* and *SUB* buttons during calibration to match the reading shown on the screen to the value of the gas being applied.
- Auto calibration will set the reading, after a predetermined amount of time, during calibration to the value entered during the auto calibration setup process.

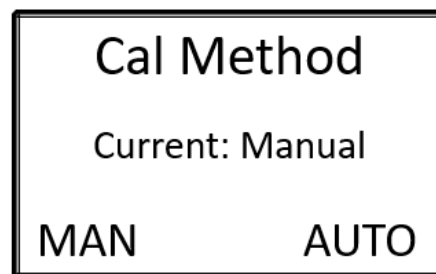

1. Use the *ADD* button to select manual calibration and the *SUB* button to select auto calibration.
2. Press the *MENU* button to advance to the Modbus Address Setting screen.

3.9 MODBUS ADDRESS SETTING

Modbus is a leading industrial open control protocol. Modbus is available in several different types, depending upon the media over which it is transmitted. Like most communication protocols, Modbus uses a master/client type behavior. The master sends a poll request for information to the client, the client decodes the request, and then sends a response with the requested data back to the master.


A Modbus message includes a Modbus address, commonly referred to as a unit ID. The Modbus address is used to identify the server address in RS-485 networks. Each server is assigned an address and listens for messages which contain this number in the Modbus address field.

The OI-6000K uses the original Modbus RTU specifications over the RS-485 link. RS-485 Modbus has 255 addresses, ranging from 1 to 255. Eight of the addresses are used for internal system settings, leaving addresses 1 to 247 available for your device.

The RS-485 Modbus communication parameters used in Otis devices is 8 data bits, no parity, and 1 stop bit; these parameters are fixed and cannot be changed. The floating point data values are presented with the least significant bytes first.

When using Modbus over a RS-485 network, the communication parameters *MUST* be set correctly for all devices. For multiple devices using Modbus, ensure that no two units are assigned the same address. A duplication of addresses could cause errors in the transmission of data. Modbus addresses can be assigned sequentially or another appropriate address scheme for the specific network setup.

The factory default setting on the OI-6000K for the Modbus address setting is 1.

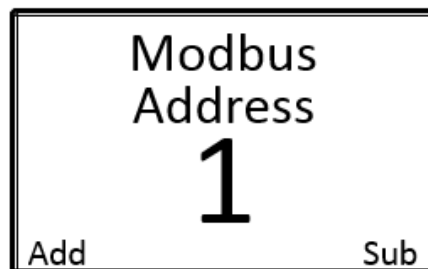

1. Use the *ADD* and *SUB* buttons to increase and decrease the Modbus address number, respectively.
2. Press the *MENU* button to select the desired setting and to advance to the Modbus baud setting screen.


3.10 MODBUS BAUD SETTING

The baud rate is the speed of data transmitted within the Modbus system, measured in bits per second (bps). For successful communication, the baud rate setting of the OI-6000K *MUST* match the baud rate setting on the attached Otis Monitor, or other Modbus device.

All Otis devices have factory default Modbus baud settings of 9600 bps. The RS-485 Modbus communication parameters used in all Otis devices are 8 data bits, no parity bit, and 1 stop bit (8-N-1) these parameters are fixed and cannot be changed. Some devices come with different Modbus baud rates. Check with your system administrator to determine if a different Modbus baud setting is needed for your system.

The pre-set Modbus baud setting available for the OI-6000K are the following:

- 110 bps
- 300 bps
- 1200 bps
- 2400 bps
- 4800 bps
- 9600 bps
- 19200 bps

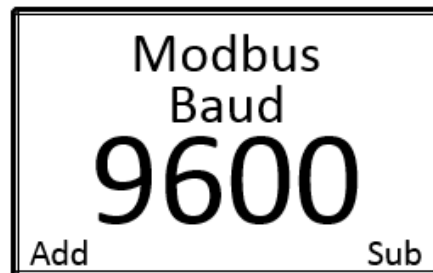


1. Use the *ADD* and *SUB* buttons to scroll through the available Modbus baud options.
2. Press the *MENU* button to select the desired setting and to advance to the 4-20 mA offset settings screen.

3.11 4-20 mA OFFSET SETTINGS

Setting the 4-20 mA offset allows the end-user to calibrate the sensor’s analog output. Upon installation of the device, if the detected gas reading on OI-6000K does not correspond to the reading on the Otis Monitor, or other monitoring device, the zero offset (4 mA) and the full-scale offset (20 mA) can be adjusted on the unit.

Overtime, as electronic components suffer from normal wear and tear, the circuits will tend to drift. This drift can cause variances in the amount of current output by the sensor, or in the current measurement by the monitor. If at any time the reading on the OI-6000K no longer matches the reading on the monitoring device, the 4-20 mA offset will need to be recalibrated.


The factory default settings on the OI-6000K for the 4-20 mA offset are 4.00 mA for the zero offset and 20.00 mA for the full-scale offset.

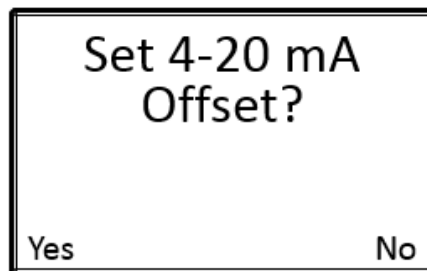

1. Press the *ADD* button to select “Yes” to set the 4-20 mA offset and to advance to the zero offset setting screen. If you do not wish to set the 4-20 mA offset, press the *SUB* button to select “No” to advance to the display screen contrast setting screen.


3.11.1 ZERO OFFSET SETTING

If “Yes” is selected to set the 4-20 mA offset:

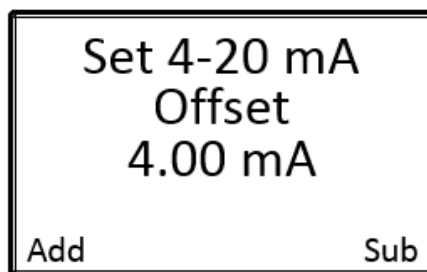

1. Use the *ADD* and *SUB* buttons to increase and decrease the zero offset on the unit, respectively, until the *Otis Monitor* reads 0 %/PPM, depending on the gas type being detected.
2. Press the *MENU* button to save the desired setting and to advance to the full-scale offset setting screen.

3.11.2 FULL-SCALE OFFSET SETTING

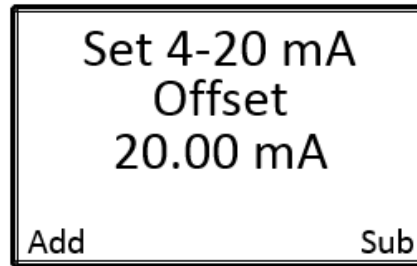

1. Use the *ADD* and *SUB* buttons to increase and decrease the full-scale offset, respectively, until the *Otis Monitor* reads the full scale value for that channel.
2. Press the *MENU* button to save the desired setting and to advance to the display screen contrast setting screen.

3.12 DISPLAY SCREEN CONTRAST SETTING


The display screen contrast is the difference in luminance or color that makes the displayed images distinguishable. Due to varying external elements, such as extreme sunlight, the brightness of the display screen may need to be adjusted for optimum viewing.

The factory default setting on the OI-6000K for the display screen contrast is 29, approximately 45% of the contrast scale. The contrast setting ranges from 1 to 64.



NOTICE

Setting the contrast too low will cause the display image to become faint or indistinguishable, especially when the unit is located in areas with full-sun. The resulting field of view could be misinterpreted as an error within the device. Be sure to verify that the selected contract is within an appropriate range of viewing.

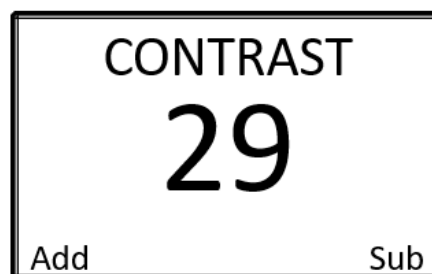


3. Use the *ADD* and *SUB* buttons to brighten and dim the contrast, respectively.
4. Press the *MENU* button to select the desired setting and to advance to the return to factory default settings screen.

3.13 RETURN TO FACTORY DEFAULT SETTINGS

Returning the OI-6000K to its factory default settings will reset all customization of the device, including the null and calibration settings of the sensor element.


| <i>OI-6000K Product and Configuration Factory Default Settings</i> | |
|--|----------------|
| <i>Configuration</i> | <i>Setting</i> |
| Relay Test | -- |
| System Information | -- |
| Null/Calibration Timer | *Cleared* |
| Unit Information | -- |
| Relay 1: Latching/Non-Latching | UnLatch |
| Relay 2: Latching/Non-Latching | UnLatch |
| Relay 1: Fail-Safe Setting | No (Off) |
| Relay 2: Fail-Safe Setting | No (Off) |
| Calibration Method | Manual |
| RS-485 Modbus Address Setting | 1 |
| RS-485 Modbus Baud Setting | 9600 bps |
| 4-20 mA Zero Offset Setting | 4.00 mA |
| 4-20 mA Full-Scale Offset Setting | 20.00 mA |
| Contrast | -- |

| <i>OI-6000K Operation Factory Default Settings</i> | |
|--|---------------------|
| <i>Configuration</i> | <i>Setting</i> |
| Sensor Element Null | *Cleared* |
| Sensor Element Calibration | *Cleared* |
| Sensor Assembly Low Alarm Setting | 10% of Sensor Scale |
| Sensor Assembly Low Alarm Rise/Fall Setting | Rise |
| Sensor Assembly High Alarm Setting | 15% of Sensor Scale |
| Sensor Assembly High Alarm Rise/Fall Setting | Rise |

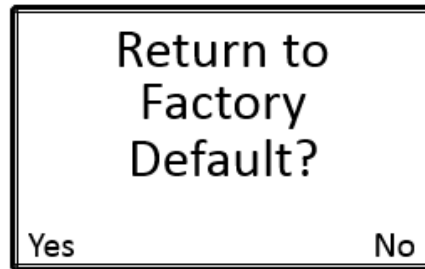

1. Press the *ADD* button to select "Yes" to return the device to its factory default settings and to advance to the return to factory default settings confirmation screen. If you do not wish to return the device to its factory default settings, press the *SUB* button to select "No" to continue to the Reset Null & Cal Only screen.

If "Yes" is selected to return the device to its factory default settings:

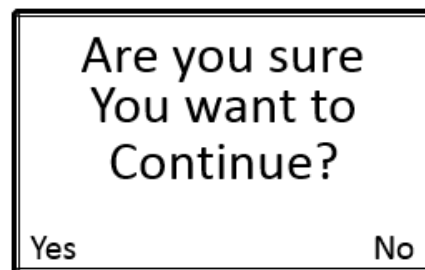

1. Press the *ADD* button to select "Yes" to confirm that you want to reset the device to its factory default settings and to return the device to normal operating mode. If you do not wish to continue to return the device to its factory default settings, press the *SUB* button to select "No" to continue to the Reset Null & Cal Only screen.



NOTICE

If the OI-6000K is reset to the factory default settings, the configuration steps *MUST* be repeated and the device *MUST* then be nulled and calibrated for proper operation of the device.


3.14 RESET NULL & CALIBRATION VALUES

Resetting the null and calibration settings of the sensor element will allow the currently stored null and calibration values to be rest without having to reconfigure all of the other operational settings like with the Return to Factory Defaults option.



1. Press the *ADD* button to select “Yes” to reset the Null and Calibration values and to advance to the Reset Null & Cal Only confirmation screen. If you do not wish to reset the null and calibration values, press the *SUB* button to select “No” to leave the product settings and configuration menu and to return the device to normal operating mode.

If “Yes” is selected to reset the null and calibration values:

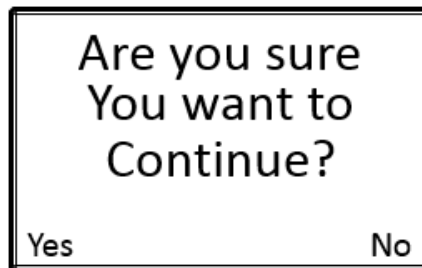

2. Press the *ADD* button to select “Yes” to confirm that you want to reset the Null and Calibration values and to return the device to normal operating mode. If you do not wish to continue to reset the Null and Calibration values, press the *SUB* button to select “No” to leave the product settings and configuration menu and to return the device to normal operating mode.



NOTICE

If the OI-6000K stored Null and Calibration values are reset the device *MUST* be nulled and calibrated for proper and safe operation of the device.


4 OPERATION SETTINGS

At the time of installation, when the power is first applied to the OI-6000K, the unit is automatically powered on and begins the startup sequence. During the 1-minute warmup, the display will show a countdown of the time remaining until the system start-up is complete. The Otis logo and the unit information will also flash on the display screen and, at the end of the countdown, the device will be in normal operating mode.

4.1 POWERING THE DEVICE

4.1.1 POWERING OFF

Powering off the device stops the operation of the unit. The product settings and configuration, as well as the operation settings, including the null and calibration of the sensor, will be unaffected.

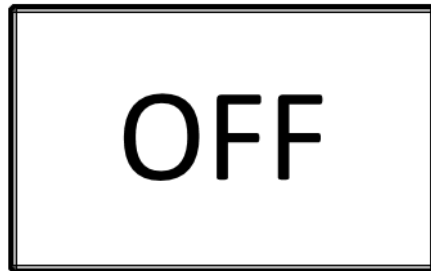

1. *Press and hold the SUB button for approximately 6 seconds, until “OFF” shows on the display screen.*

The display screen will continue to show “OFF” for the duration of time that the unit is powered off, as long as long as uninterrupted power is supplied to the unit.

4.1.2 POWERING ON

Powering on the device begins the operation of the unit, automatically initiating the system start-up cycle and 1-minute warmup period. The OI-6000K will be in normal operating mode at the completion of the system start-up.

1. *Press the ADD button once to turn the unit on.*

4.2 SENSOR CALIBRATION

Calibration is the process of evaluating and adjusting the precision and accuracy of measurement equipment. Although Otis calibrates every device at the factory, for best accuracy, the detector *SHOULD* be calibrated in the environment where it is installed.


It is imperative that the calibration occur as part of the installation process, and then *EVERY* thirty (30) days thereafter. Days since last calibration should *NEVER* exceed ninety (90) days. Otis recommends that you calibrate your device regularly to ensure proper functionality and a safe work environment.

4.2.1 NULLING THE SENSOR (AUTO NULL)


The first step of calibration is nulling the sensor, sometimes referred to as “setting the zero” or “zeroing the sensor.” The nulling process *MUST* be performed in known clean air, with no contaminants or hazardous gasses present, before calibrating the sensor assembly. If air quality cannot be guaranteed, a bottle of zero air will be required to properly null the sensor.



1. While the product is in normal operating mode, press the *MENU* button to activate the operation settings menu.

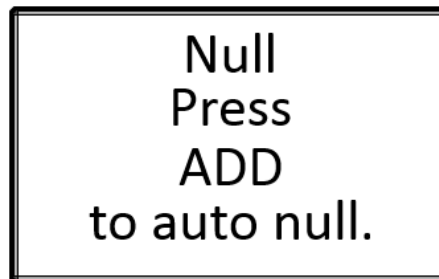

2. Press the *ADD* button to begin the null process and advance to the clean air confirmation screen.

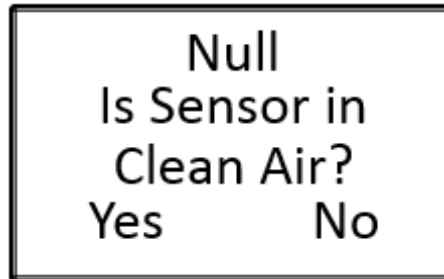


3. Press the *ADD* button to select "Yes" to confirm that the sensor is in clean air and to begin nulling the sensor. If the sensor is not in clean air, press the *SUB* button to select "No" to discontinue the null process and to return to the previous screen.




NOTICE

If "Yes" is selected at this point, the null process cannot be stopped without disconnecting the power from the unit.

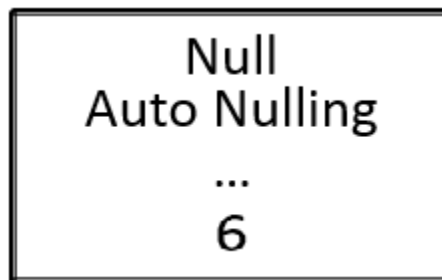


4. The unit will automatically begin the 6-second null process. During null, the display will show a countdown of the time remaining until the process is complete.

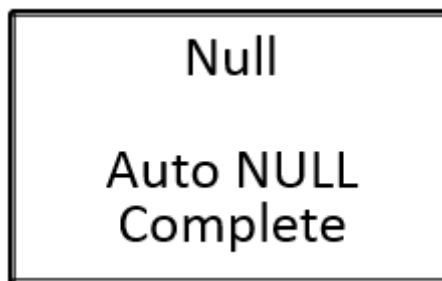


5. When null process is complete, press the *MENU* button to advance to the calibration screen.

4.2.2 CALIBRATING THE SENSOR (MANUAL CAL)

You should *ONLY* perform the calibration of the sensor after the null process has been completed. For best results, use 50% of the sensor scale of your target gas in an air balance with a flow rate of 0.25 to 0.5 LPM. The screen below will appear upon entering calibration mode. If Auto Cal was chosen during the *Product Settings and Configuration* section please skip to section 4.2.3.

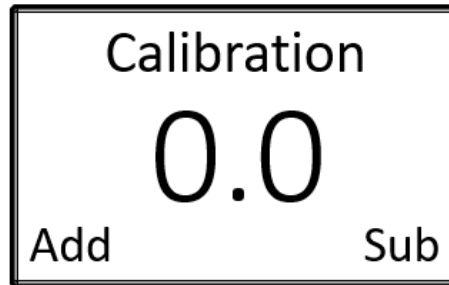

1. Unscrew and remove the sensor housing cap from the assembly.
2. Affix a Calibration Adapter Kit (sold separately) to the sensor housing of the device.
3. Affix a regulator to the calibration gas bottle.
4. Attach the tubing on the Calibration Adapter Kit to the regulator on the calibration gas bottle.
5. Ensure that the gas is flowing and watch the reading increase. When the reading stabilizes, approximately 1 minute, use the *ADD* and *SUB* buttons to adjust the reading on the screen to match the applied calibration gas concentration.

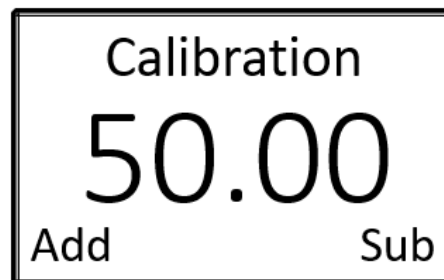


NOTICE

If the sensor responds extremely slow, or does not respond to the applied gas, it may indicate a failed sensor element. The sensor element will need to be replaced before completing the null and calibration process.


6. When calibration is complete, detach the Calibration Adapter Kit from the sensor housing and reaffix the sensor housing cap. Press the *MENU* button to advance to the Low Alarm Setting screen.

4.2.3 CALIBRATING THE SENSOR (AUTO CAL)


You should *ONLY* perform the calibration of the sensor after the null process has been completed. For best results, use 50% of the sensor scale of your target gas in an air balance with a flow rate of 0.25 to 0.5 LPM.

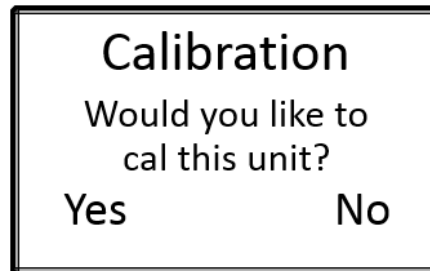

1. Press the *ADD* button to select "Yes" to begin the calibration process and to advance to the calibration confirmation screen. If you do not wish to calibrate the sensor, press the *SUB* button to select "No" to advance to the sensor radio address setting screen.

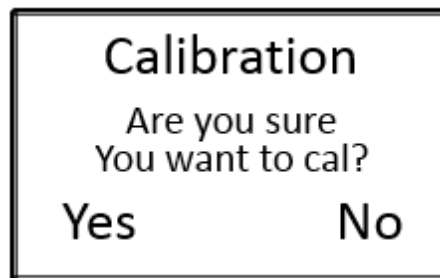

2. Press the *ADD* button to select "Yes" to confirm that you want to calibrate the sensor and to continue to the concentration setting screen. If you do not wish to continue to calibrate the sensor, press the *SUB* button to select "No" to advance to the sensor radio address setting screen.

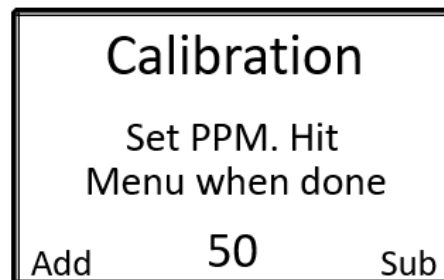

3. Use the *ADD* and *SUB* buttons to adjust the concentration to the calibration gas being used. Press the *MENU* button to save the gas concentration setting and to advance to the calibration start screen.
4. Affix a Calibration Adapter Kit (sold separately) to the sensor housing of the device.

5. Affix a regulator to the calibration gas bottle.
6. Attach the tubing on the Calibration Adapter Kit to the regulator on the calibration gas bottle.

Calibration
Apply gas then
hit menu button

7. Ensure that the gas is flowing and press the *MENU* button to begin calibrating the sensor, the unit will automatically begin the calibration process, the amount of time on the timer will vary based on the gas type. During calibration, the display will show a countdown of the time remaining until the process is complete.

Calibration
It will be caled
At the end of timer
120



NOTICE

Once the calibration countdown has started, the process cannot be stopped without disconnecting the power from the unit.

Calibration
Unit is now caled
to 50 PPM.
Reading: 50

8. When calibration is complete, detach the Calibration Adapter Kit from the sensor housing and reattach the sensor housing cap. Press the *MENU* button to advance to the Low Alarm Setting screen.


4.3 SENSOR ALARM SETTINGS

The OI-6000K has two alarm settings: LOW alarm and HIGH alarm. All alarm set-points are field adjustable up to 60% of the full-scale gas concentration. The factory default setting on the OI-6000K for the LOW alarm is 10% of full scale and 15% of full scale for the HIGH alarm. The LOW alarm set-point should *NEVER* be programmed to a higher setting than the HIGH alarm set-point.

Both alarms are configurable to activate on either a rising or falling level of gas. Most gas types activate alarms on rising levels of gas. Oxygen is a special case and by default activates the LOW alarm when the detected gas concentration FALLS below the LOW alarm set-point and the HIGH alarm when the detected gas concentration RISES above the HIGH alarm set-point. The factory default setting for all other gas types is to activate when the detected gas RISES above the alarm set-point.

When the gas concentration detected at the sensor meets or exceeds the LOW alarm set-point, the LOW alarm indicator LED will illuminate amber. When the gas level meets or exceeds the HIGH alarm set-point, the HIGH alarm indicator LED will illuminate red. The alarm indicator LEDs will not switch off until the gas level reading at the sensor has fallen 10% below the alarm set-points or until the alarm is manually reset at the device, dependent upon the relay latching/non-latching settings.

4.3.1 SENSOR LOW ALARM SETTING

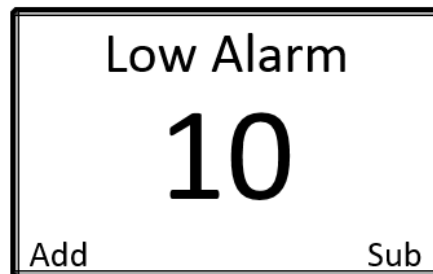


1. Use the *ADD* and *SUB* buttons to increase and decrease the LOW alarm set-point, respectively.
2. Press the *MENU* button to save the desired setting and to advance to the sensor LOW alarm rise/fall setting screen.

4.3.2 SENSOR LOW ALARM RISE/FALL SETTING



1. Use the *ADD* and *SUB* buttons to select between activation on a Rising or a Falling gas level, respectively.
2. Press the *MENU* button to save the desired setting and to advance to the sensor HIGH alarm setting screen.

4.3.3 SENSOR HIGH ALARM SETTING

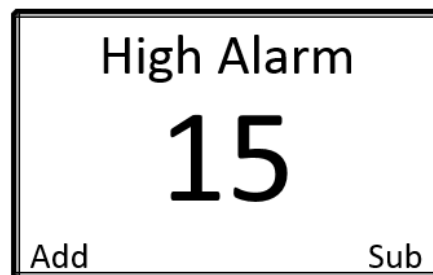

1. Use the *ADD* and *SUB* buttons to increase and decrease the HIGH alarm set-point, respectively.
2. Press the *MENU* button to save the desired setting and to advance to the sensor HIGH alarm rise/fall setting screen.

4.3.4 SENSOR HIGH ALARM RISE/FALL SETTING



1. Use the *ADD* and *SUB* buttons to select between activation on a Rising or a Falling gas level, respectively.
2. Press the *MENU* button to save the desired setting and to advance to setting the radio address (if you have a radio module installed), otherwise you will return to Normal Operating Mode.



NOTICE

- ◆ The alarms will *NOT* activate, even in the presence of gas, until you have exited the menu mode for approximately 1 minute.
- ◆ For non-latching alarms, the alarms will *NOT* deactivate until the gas level reading at the sensor has fallen 10% below the alarm set-point.

4.4 MANUAL RESET FOR ACTIVATED LATCHING ALARMS

Relay alarms set to latching will not deactivate until the alarms are manually reset at the device. This includes LOW and HIGH alarm indicator LEDs and wired relays. When latching alarms have been activated, refer to the following instructions for how to manually deactivate the alarms on your device:

1. Verify that the gas level reading is below the alarm level setting.
2. Press the *MENU* button to deactivate latching alarm(s).



NOTICE

- ◆ The gas level reading *MUST* be below the alarm level setting before the alarm can be deactivated.
- ◆ Press the *MENU* button *ONLY* once to deactivate the latching alarm(s). Pressing the *MENU* button more than once will activate and open the operation settings menu.

5 PRODUCT MAINTENANCE

5.1 SCHEDULED MAINTENANCE

Otis recommends that our equipment be calibrated a *MINIMUM* of every 90 days, and *STRONGLY* advise that calibration be performed every 30 days. Without knowing the specific application, sensor assembly location, gas exposure, and other factors, the company recommends monthly calibrations – assuming no damage or potential damage has occurred to the sensor and that there has not been a power outage to the sensor assembly. If damage has occurred or the power supplied to the sensor has changed, a calibration should be completed immediately.

Scheduled maintenance should include the null and calibration of the sensor and a relay test. Consult the Sensor Calibration and Relay Test sections of this manual for further information and instructions on how to perform these procedures.

The sensor head should be kept free of airborne particles, dirt, mud, spider webs, bugs and insects, and/or any other debris that could potentially cover or coat the sensor. Keeping the sensor head clear of foreign articles will allow for proper operation of the device. A brief inspection during scheduled maintenance should suffice, but dependent upon the location and the environment in which the unit is installed, more frequent inspections may be warranted.

The sensor assembly may be adversely affected by the exposure to certain airborne substances. Loss of sensitivity or corrosion may be gradual, if such materials are present in sufficient concentrations. The performance of the device may be impaired during operation in the presence of substances that can cause corrosion on gold plating. Continuous and high concentrations of corrosive gases may also have a detrimental long-term effect on the product's service life. The presence of such substances in an area does not preclude the use of this device, but the likelihood of the shortened lifetime of the sensor element, as a result, should be noted. Use of the sensor assembly in these environments may require more frequently scheduled maintenance to ensure safe and reliable system performance.

5.2 SENSOR REPLACEMENT


The sensor elements used in the OI-6000K detects gas in either % or PPM concentrations, this element must be fully functional in order for the system to operate correctly. Otis recommends replacing the sensing element whenever a slow response to gas is observed during the normal calibration process. After replacing the sensing element the device *MUST* then be nulled and calibrated for proper operation of the device.




CAUTION

- ◆ The internal components can be static sensitive. Use caution when opening the enclosure and handling internal components.
- ◆ *DO NOT* use any metal objects or tools to remove the sensing element from the sensor adapter board.

1. *Press and hold* the **SUB** button for approximately 6 seconds, until “OFF” shows on the display screen.
2. Unscrew and remove the sensor housing cap from the sensor housing base. Set aside.
3. Using the thumb and forefinger, gently unplug the sensing element from the sensor housing board.

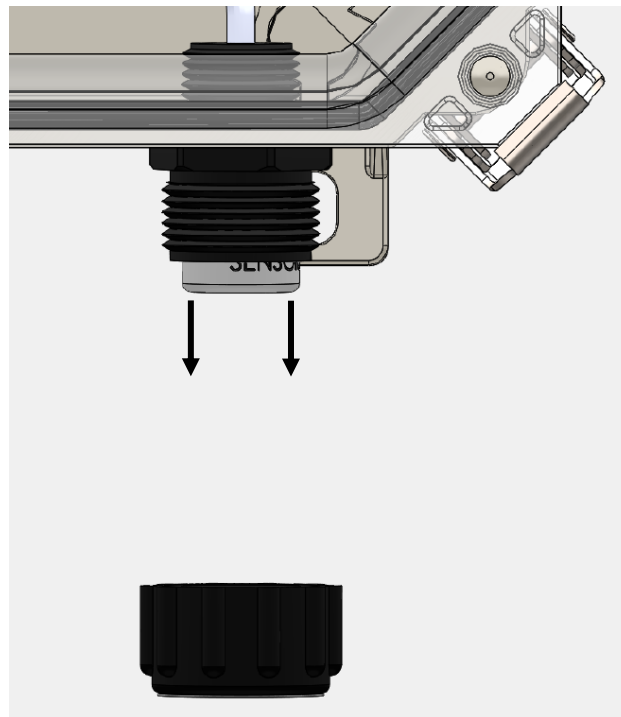

4. Plug in the new sensing element into the sensor housing board. Ensure that the pins on the sensing element align with the sockets on the sensor housing board.

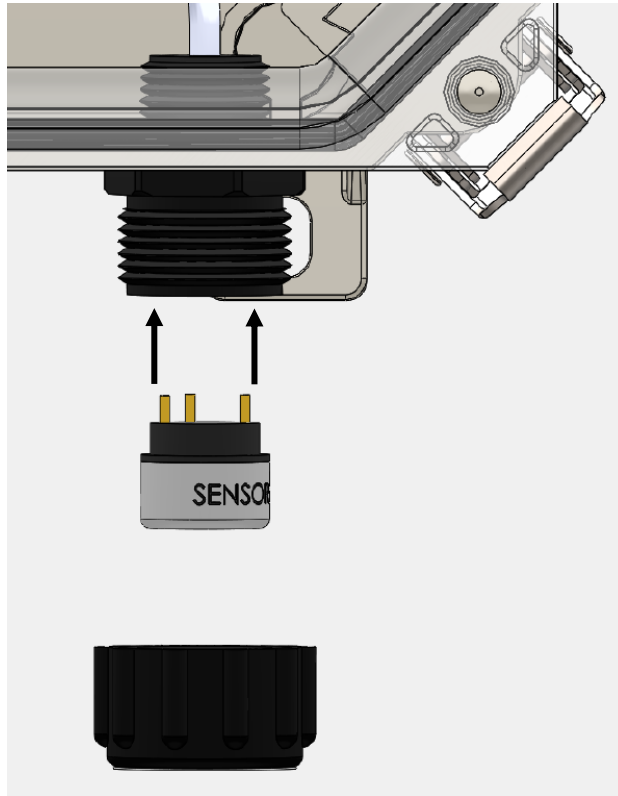

5. Screw the sensor housing cap back onto the sensor housing base, ensuring that the sensor housing cap is only tightened hand tight.

5.3 PRODUCT TROUBLESHOOTING

| <i>OI-6000 Fault Codes</i> | | |
|-------------------------------------|--|--|
| <i>Problem</i> | <i>Cause(s)</i> | <i>Solution(s)</i> |
| <i>F1</i> Check Sensor Cable | 1. The control board has lost communication with the digital sensor interface adapter board. | 1. Check connection between the sensor housing connector header and the digital sensor interface adapter board plug-in. 2. Replace the digital sensor interface adapter board |
| <i>F4</i> Check Sensor Board | 1. The control board has lost communication with the sensor interface board. | 1. Replace the sensor interface board. |
| <i>F5</i> Try to Null Again | 1. The unit did not null correctly, due to: • the presence of gas, • a sensor error, or • a sensor interface board error. | 1. Re-null the device in clear air. 2. Replace the sensor element. 3. Replace the sensor interface board. |
| <i>F6</i> Try to Calibrate Again | 1. The unit did not calibrate correctly, due to: • the absence of gas, • a sensor error, or • a sensor interface board error. | 1. Recalibrate the sensor element and verify that gas is present during calibration. 2. Replace the sensor element. 3. Replace the sensor interface board. |
| <i>F14</i> Check Radio | 1. The sensor assembly has lost communication with the Primary Monitor • Network ID is incorrectly configured. • Sensor assembly is obstructed/too far from the Primary Monitor. • Radio module is not working in the sensor assembly | 1. Check that the Network ID on the sensor assembly matched the Primary Monitor Network ID 2. Move the sensor assembly away from the obstruction or use a high gain antenna. 3. Replace sensor radio module. |

When replacing the sensor element, the detector must be nulled and calibrated.
System faults will activate the fault terminal on the device.

5.4 PRODUCT REPLACEMENT PARTS AND ACCESSORIES

While not all the components on the OI-6000K can be field-replaced, there are several parts that are replaceable by an Otis Approved Service Technician.

To purchase accessories/replacement parts for your device, contact the sales representative of this product for assistance.

| <i>OI-6000K-X-X-X-NXP-X Product Replacement Parts and Accessories</i> | |
|--|-----------------------------------|
| <i>External Replacement Parts</i> | |
| <i>Part Name</i> | <i>Otis Part Number</i> |
| Main Enclosure with Lid | OI-448 |
| Electrochemical Sensor Housing Base | OI-254NXP-BASE |
| IR/PID Sensor Housing Base | OI-140NXP-BASE |
| Sensor Housing Cap with Screen | OI-254NXP-CAP |
| <i>Internal Replacement Parts</i> | |
| <i>Part Name</i> | <i>Otis Part Number</i> |
| Control board with LCD Screen | OI-6000-CB-KIT |
| Relay Board | OI-6000-MRB-PCA |
| Digital Sensor Interface Adapter Board | OI-6000-NXP-DB-PCA |
| Infrared Sensor Interface Adapter Board | OI-2011-NXP-S |
| PID Sensor Interface Adapter Board <i>*Specify PPM Scale When Ordering (10, 20, 50, 1K, or 2K)</i> | OI-2014-NXP-S-[Scale]* |
| Electrochemical Sensor Interface Board <i>**Specify Gas Type When Ordering</i> | OI-2015-NXP-S-[Gas Type]** |
| Oxygen Sensor Interface Board | OI-2016-NXP-S-O2 |
| <i>Product Accessories</i> | |
| <i>Part Name</i> | <i>Otis Part Number</i> |
| Filter for Dusty Environments | OI-2000-CAP-FILTER |
| Calibration Adapter Kit | OI-410-NXP |

APPENDICES

- APPENDIX A: INTRODUCTION TO 4-20 mA CURRENT LOOP SIGNALS
- APPENDIX B: MODBUS COMMUNICATIONS
- APPENDIX C: MODBUS REGISTER MAP
- APPENDIX D: OTIS INSTRUMENTS PRODUCT WARRANTY STATEMENT
- APPENDIX E: INFORMATION ABOUT RMA SERVICE REPAIRS
- APPENDIX F: INFORMATION ABOUT RMA RETURNS FOR CREDIT

APPENDIX A: INTRODUCTION TO 4-20 MA CURRENT LOOP SIGNALS

This appendix is only an introduction. The information should serve as a brief overview of 4-20 mA current loop signal ranges and should not be considered a complete reference for proper implementation or use.

Industry standards pertaining to 4-20 mA current loop signals and other aspects of electronics are assumed to be known by the technician. For proper connection to a monitor or Programmable Logic Controller (PLC), refer to the manufacturer's specific manual or instructions for that device.

OVERVIEW

When using 4-20 mA wired output signal devices, the 4-20 mA defines the current loop analog signal range, with 4 mA representing the lowest end of the range and 20 mA the highest. The relationship between the current loop and the gas value is linear. In addition, Otis devices use values below 4 mA to indicate special status conditions, as shown below:

| 4-20 mA Ranges | |
|----------------|----------------------------|
| Current | Detector Status |
| 2.5 mA | Sensor Fault |
| 3 mA | Sensor in Menu Mode |
| 3.5 mA | Sensor in Calibration Mode |

The 4 mA allows the receiving monitor/PLC to distinguish between a zero signal, a broken wire, or an unresponsive instrument. Benefits of 4-20 mA convention are that it is: an industry standard, low-cost to implement, can reject some forms of electrical noise, and the signal does not change value around the "loop" (as opposed to voltage). The key advantage of the current loop is that the accuracy of the signal is not affected by a potential voltage drop in the interconnected wiring. Even with significant resistance in the line, the current loop transmitter will maintain the proper current for the device, up to its maximum voltage capability.

Only one current level can be present at any time. Each device that operates via a 4-20 mA current loop signal must be wired directly to the monitoring device. Units that are wired in a daisy chain configuration for the 4-20 mA current loop signal will not properly transmit data communications to the monitoring device.

CALCULATIONS

$$I_{(4-20)} = \left(\frac{(16)(\text{value})}{\text{scale}} \right) + 4$$

$I_{(4-20)}$ = Current of loop, measured in mA

value = ppm (or %) of gas concentration


scale = full scale of sensor

| <i>Sensor Element Scale Ranges</i> | | | |
|------------------------------------|-------------------------------|----------------|--------------|
| <i>Sensor Type</i> | <i>Gas Type</i> | <i>Formula</i> | <i>Range</i> |
| Electrochemical (EC) | Hydrogen Sulfide | H2S | 0-100 PPM |
| Electrochemical (EC) | Hydrogen Sulfide (High Range) | H2S2K | 0-2000 PPM |
| Electrochemical (EC) | Sulfur Dioxide | SO2 | 0-20 PPM |
| Electrochemical (EC) | Oxygen | O2 | 0-25 % |
| Electrochemical (EC) | Carbon Monoxide | CO | 0-1000 PPM |
| Electrochemical (EC) | Chlorine | CL2 | 0-20 PPM |
| Electrochemical (EC) | Hydrogen Chloride | HCL | 0-30 PPM |
| Electrochemical (EC) | Ammonia | NH3 | 0-100 PPM |
| Electrochemical (EC) | Ammonia (Medium Range) | NH3300 | 0-300 PPM |
| Electrochemical (EC) | Ammonia (High Range) | NH3A | 0-1000 PPM |
| Electrochemical (EC) | Hydrogen | H2 | 0-4 % Vol |
| Electrochemical (EC) | Chlorine Dioxide | CLO2 | 0-1 PPM |
| Electrochemical (EC) | Hydrogen Cyanide | HCN | 0-50 PPM |
| Electrochemical (EC) | Nitrogen Dioxide | NO2 | 0-20 PPM |
| Electrochemical (EC) | Phosphine | PH3 | 0-5 PPM |
| Infrared (IR) | Carbon Dioxide | CO2 | 0-5 % |
| Infrared (IR) | Combustible Gas | LEL | 0-100 % |
| Photo Ionization Detector (PID) | Volatile Organic Compounds | VOC10 | 0-10 PPM |
| Photo Ionization Detector (PID) | Volatile Organic Compounds | VOC20 | 0-20 PPM |
| Photo Ionization Detector (PID) | Volatile Organic Compounds | VOC50 | 0-50 PPM |
| Photo Ionization Detector (PID) | Volatile Organic Compounds | VOC1K | 0-1000 PPM |
| Photo Ionization Detector (PID) | Volatile Organic Compounds | VOC2K | 0-2000 PPM |

Actual ranges may vary with our product. For inquiries beyond the information and instructions provided, contact the sales representative of this product for assistance.

MEASURING CURRENT

If the value measured is 0 mA, then: the loop wires are broken, the sensor assembly is not powered up, the sensor assembly is malfunctioning, or the monitor is malfunctioning. A digital multi-meter (DMM), or current meter, may be used in conjunction with the monitoring device and/or to test the 4-20 mA current loop signal. To measure the current, place the meter probes in line with the current loop.

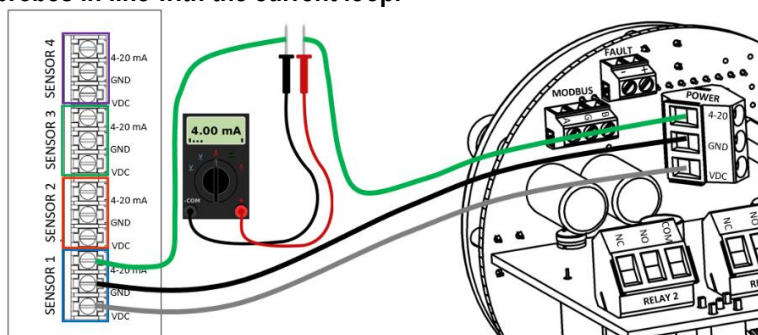

APPENDIX B: MODBUS COMMUNICATIONS

Certain Otis Monitors have the capability of accepting Modbus sensor inputs for data communications with OI-6000 series detectors. Modbus is a communication protocol that uses an RS-485 serial connection, and can accept a number of different devices.

Based on the type of circuit used, there is a limit on how many devices that can be connected to a Modbus sensor network. Otis Monitors currently allow a maximum of 32 devices on a single network. The data is transferred along the Modbus network at a specified Modbus baud, or rate of speed. Though small, networks that have a high number of devices connected will incur a small, proportional delay in the communication transfer of data.

WIRING CONFIGURATIONS

A daisy chain is a wiring scheme in which multiple devices are wired together in a sequence, or in a ring. Daisy chains may be used for power, analog signals, digital data, or a combination thereof. For the purposes of Otis devices, the term daisy chain refers to multiple devices connected in a series to form a single long line of devices, connected via the wiring patterns embedded within each device.


Twisted pair cabling is a type of wiring in which two conductors of a single circuit are twisted together for the purposes of canceling out electromagnetic interference (EMI) from external sources as well as “crosstalk” between neighboring pairs. In electronics, crosstalk is any phenomenon by which a signal transmitted on one circuit or channel of a transmission system creates an undesired effect in another circuit or channel. Otis products require twisted pairs for all wired Modbus connections.

Twisted pair cables are often shielded in an attempt to further prevent EMI. Electromagnetic shielding provides an electric conductive barrier to attenuate electromagnetic waves external to the shield and provides a conduction path by which induced currents can be circulated and return to the source, via ground reference connection. These cables are referred to as shielded twisted pairs (STP) and are recommended for operation areas with high noise levels.

PROPER CONNECTION

The distance of the Modbus connection from the gas detection device to the monitor cannot exceed 4,000 feet. In the instance of daisy-chained devices, this applies to the last sensor connected on the line. Connection distances of 100 feet, or less, require 22 to 24 gauge wire. Connection distances that range more than 100 feet require 18 to 20 gauge wire.

For more information on properly wiring a daisy chain network of devices for Modbus, consult the following diagram.

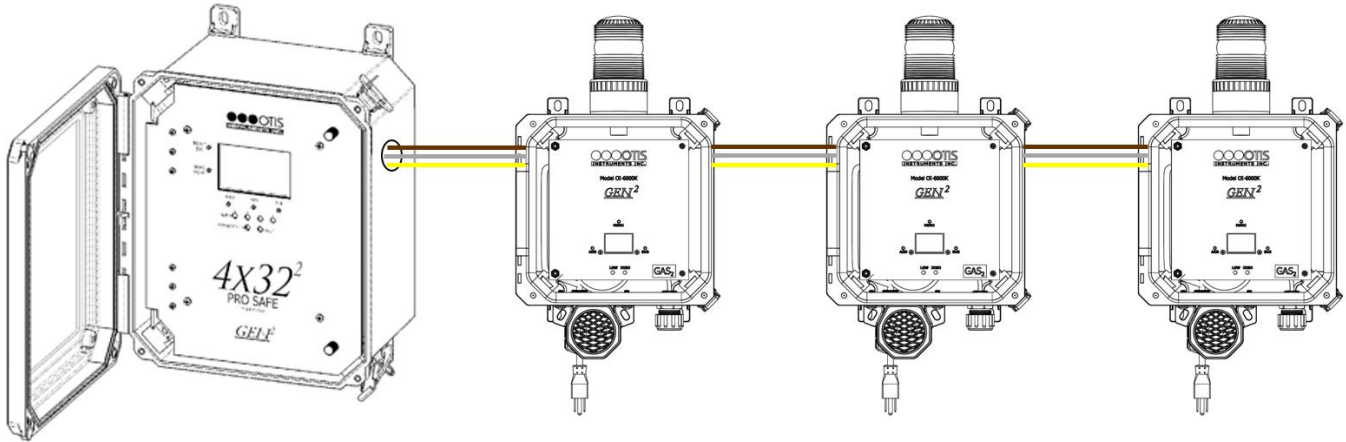

The signal wire of each unit is run to the signal terminal of the neighboring sensor. With each device connected to the previous device via the signal wire, a “chain” is created, with the first device in the chain directly connected to the monitor.

RS-485 Modbus Connection Distances for Electrical Wiring

| <i>Distance</i> | <i>Length</i> | <i>Gauge Size</i> | <i>Twisted Pairs</i> |
|-----------------|--------------------------|-------------------|----------------------------------|
| Short | < 100 Feet | 22 to 24 Gauge | Shielded, in areas of high noise |
| Medium | 101 Feet to 1,000 Feet | 18 to 20 Gauge | Shielded, in areas of high noise |
| Long* | 1,000 Feet to 4,000 Feet | 18 to 20 Gauge | Shielded, in areas of high noise |

(*) Terminating resistor may be required for the last device in the daisy-chain.

APPENDIX C: MODBUS REGISTER MAP

OI-6000 FAMILY MODBUS REGISTER MAP

| Register Address (Hex) | Register Address (Dec) | Data Description | R/W | Length | Unit | Valid Response(s) |
|------------------------|------------------------|-----------------------------|-----|--------|-------|---|
| 1 | 1 | Gas Reading | R | 2 | FLOAT | Numerical Gas Reading |
| 3 | 3 | Modbus Address | R | 1 | UINT | 0 – 247 |
| 4 | 4 | Gas Type | R | 1 | ENUM | 0 – 26, see below |
| 5 | 5 | Unit Type | R | 1 | ENUM | 0 – 1, see below |
| 6 | 6 | Major Revision | R | 1 | UINT | 0 – 100 |
| 7 | 7 | Minor Revision | R | 1 | UINT | 0 – 9 |
| 8 | 8 | Mode of Sensor | R | 1 | ENUM | 0 – 7, see below |
| 9 | 9 | Voltage Reading | R | 2 | FLOAT | 12V – 35V |
| B | 11 | Fault Code | R | 1 | ENUM | 0 – 6, see below |
| C | 12 | Sensor Type | R | 1 | ENUM | 0-4, see below |
| E ⁺ | 14 ⁺ | Relay 1 Setting | R | 2 | FLOAT | 1 – 32000 |
| 10 ⁺ | 16 ⁺ | Relay 2 Setting | R | 2 | FLOAT | 1 – 32000 |
| 16 | 22 | Precision | R | 1 | INT | 0 – 3 |
| 17 ⁺ | 23 ⁺ | Relay Setting | R | 1 | BFLD | See Relay Setting Table |
| 18 | 24 | Days Since Last Null | R | 1 | UINT | 0 – 60000 (>60000) Default to “Never” |
| 19 | 25 | Calibration Type | R | 1 | ENUM | 0 – 1 |
| 1A | 26 | Auto-Calibration Value | R | 2 | FLOAT | Numerical Gas Reading |
| 1C | 28 | Days Since Last Calibration | R | 1 | UINT | 0-60000 (>60000) Default to “Never” |
| 1E | 30 | Relay 1 State | R | 1 | INT | 0 – Relay Inactive 1 – Relay Active |
| 1F | 31 | Relay 2 State | R | 1 | INT | 0 – Relay Inactive 1 – Relay Active |
| 20 | 32 | Relay 1 Reset | R/W | 1 | INT | Read as 0 Write 1 to reset Relay 1 state |
| 21 | 33 | Relay 2 Reset | R/W | 1 | INT | Read as 0 Write 1 to reset Relay 2 state |

Register Address 1: Hexadecimal numbers

Register Address 2: Decimal numbers

R/W: Read/Write capable data

R: Read-only data

FLOAT: Floating point number

ENUM: Enumeration

UINT: Unsigned integer

INT: Integer

BFLD: Bit Field

(*): Limited by precision

OI-6000 MODBUS REGISTER MAP ENUMERATION KEYS

Register Address 4: Gas Type

| <i>Response</i> | <i>Gas Type</i> |
|-----------------|----------------------------------|
| 0 | H2S – Hydrogen Sulfide |
| 1 | SO2 – Sulfur Dioxide |
| 2 | O2 – Oxygen |
| 3 | CO – Carbon Monoxide |
| 4 | CL2 – Chlorine |
| 5 | CO2 – Carbon Dioxide |
| 6 | LEL – Combustible Gas |
| 7 | VOC – Volatile Organic Compounds |
| 9 | HCL – Hydrogen Chloride |
| 10 | NH3 – Ammonia |
| 11 | H2 – Hydrogen |
| 12 | CLO2 – Chlorine Dioxide |
| 13 | HCN – Hydrogen Cyanide |
| 14 | F2 - Fluorine |
| 15 | HF – Hydrogen Fluoride |
| 16 | CH2O - Formaldehyde |
| 17 | NO2 – Nitrogen Dioxide |
| 18 | O3 - Ozone |
| 26 | PH3 – Phosphine |
| 27 | HBr – Hydrogen Bromide |
| 28 | EtO – Ethylene Oxide |
| 29 | CH3SH – Methyl Mercaptan |
| 30 | AsH3 – Arsine |
| 31 | R410A – Refrigerant |
| 32 | R1234YF – Refrigerant |
| 33 | R32 -- Refrigerant |

Register Address 5: Unit Type

| <i>Response</i> | <i>Unit Type</i> |
|-----------------|------------------|
| 0 | PPM |
| 1 | % |

Register Address 8: Mode of Sensor

| <i>Response</i> | <i>Sensor Mode</i> |
|-----------------|-----------------------|
| 0 | Normal Operating Mode |
| 1 | Null Mode |
| 2 | Calibration Mode |
| 3 | Relay Test Mode |
| 5 | Diagnostic Mode |
| 6 | Advanced Mode |

| | |
|---|--------------------|
| 7 | Administrator Mode |
|---|--------------------|

Register Address B/11: Fault Code

| <i>Response</i> | <i>Fault Type</i> |
|-----------------|---|
| 0 | No Fault |
| 1 | Loss of Communication with Sensor Board |
| 4 | Loss of Communication with Sensor Element/Housing |
| 5 | Null Error |
| 6 | Calibration Error |

Register Address C/12: Sensor Type

| <i>Response</i> | <i>Sensor Type</i> |
|-----------------|---------------------------------|
| 0 | EC – Electrochemical |
| 1 | IR – Infrared |
| 2 | CB – Catalytic Bead |
| 4 | PID – Photo Ionization Detector |

Register Address 17/23: Relay Setting

| <i>Bit</i> | <i>Relay Setting</i> | <i>Function</i> |
|------------|----------------------------|-----------------|
| 5 | Relay 2: Rise/Fall Setting | 0 – Fall |
| | | 1 - Rise |
| 4 | Relay 1: Rise/Fall Setting | 0 – Fall |
| | | 1 - Rise |
| 3 | Relay 2: Failsafe Setting | 0 – No (Off) |
| | | 1 – Yes (On) |
| 2 | Relay 1: Failsafe Setting | 0 – No (Off) |
| | | 1 – Yes (On) |
| 1 | Relay 2: Latch/UnLatch | 0 – UnLatch |
| | | 1 - Latch |
| 0 | Relay 1: Latch/UnLatch | 0 – UnLatch |
| | | 1 – Latch |

Register Address 19/25: Calibration Type

| <i>Response</i> | <i>Calibration Type</i> |
|-----------------|-------------------------|
| 0 | Manual Calibration |
| 1 | Auto Calibration |

APPENDIX D: PRODUCT WARRANTY STATEMENT

Warranty Coverage

Otis Instruments, Inc., 301 S. Texas Avenue, Bryan, Texas, 77803 (“Otis”) warrants the manufacture of all Otis hardware, firmware, software, components, and product accessories (“Otis Products”), contained in the original packaging, against defects in materials and workmanship when used normally in accordance with Otis’ published guidelines for a period of ONE (1) YEAR from the date of original purchase by the end-user/purchaser from the manufacturer or from the product’s authorized sellers/distributors (“Warranty Period”). Otis’ published guidelines include but are not limited to information contained in technical specifications, operation/user manuals and service communications.

Warranty Exclusions

This Warranty does not apply to any non-Otis manufactured products, even if packaged or sold with Otis Products. Otis does not warrant that the operation of their manufactured products be uninterrupted or error-free. Otis is not responsible for damage arising from failure to follow instructions relating to the Otis Product’s use.

This Warranty does not apply to: (a) batteries; (b) protective coatings that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship; (c) cosmetic damage, including scratches, dents and chipping of paint; (d) damage, caused by use with another product accident, abuse, misuse, or any external cause of force majeure; (e) damage, caused by operations outside of Otis’ published guidelines; (f) damage, caused by service performed by anyone who is not a representative of Otis or who is not an Otis authorized service provider; (g) damage, caused by product modifications, alterations of functionality or capability; (h) defects, caused by normal wear and tear or otherwise due to the normal aging of the Otis product, or (i) any product in which a product-labeled serial number has been removed, defaced, or altered in any way.

If examination and assessment discloses that the alleged defect in the product does not exist, or was caused by the end-user/ purchaser (or any third-party) misuse, neglect, improper wiring or installation, testing or calibrations, the Otis Product Warranty will be null and void. Any unauthorized attempts of repair, modification, or any other cause of damage beyond the range of the Otis Product’s intended use, including force majeure, voids all liability of the manufacturer.

Replaceable Batteries and Sensor Elements

All batteries supplied to the end-user/purchaser by Otis are covered, from the date of shipment, for ninety (90) days, unless otherwise excluded and noted. Sensor elements supplied to the end-user/purchaser by Otis have individual Warranty information, regarding Product Lifetime and Warranty. For more information on sensor element Warranties, refer to the Otis published guidelines.

End-User Responsibilities

End-user/purchaser should perform periodic null and calibration procedures, recommended every thirty (30) days, not to exceed ninety (90) days, for optimal performance, proper maintenance, and as a precaution against possible operational failures.

Before the end-user/purchaser receives the initial Warranty service, Otis may require the end-user to furnish proof of purchase details, respond to questions designed to assist with diagnostics, and follow Otis procedures for obtaining Warranty service.

For Otis Products that feature data logging and data storage, the end-user/purchaser should generate a separate backup copy of the information contained on the device, before submitting the Otis Product for Warranty service. Otis Warranty service is not responsible for any loss of data or settings stored on the device while under service/repair.

Otis Products submitted to Warranty service must be returned in their complete assembly, as originally shipped from the manufacturer. Warranty service will not service/repair Otis Products that are not in their original condition. For Otis Gas Detection Products, also referred to as Sensor Assemblies, the end-user/purchaser must remove external antenna(s), rain guard(s), and all batteries before shipping.

Otis Products submitted to Warranty service will be returned, as originally configured, with the factory default settings, upon completion of the service/repair. Otis is not responsible for maintaining end-user/purchaser settings, resetting the null, recalibration, or any other preparations for reinstallation and/or reintegration of the device.

Warranty Service

Please refer to the Otis published guidelines and/or the Otis website before seeking Warranty service. If the Otis Product continues to malfunction/error after consulting these resources, please contact the product's authorized seller/distributor or consult the Otis RMA/Service webpage at www.otisinstruments.com/service for information and instructions on submitting the Otis Product for Warranty service.

Otis Warranty service, at their discretion, will (a) repair the device using new or previously used parts that are equivalent to new in performance and reliability, (b) replace the Otis Product with a device that is at least functionally equivalent to the Otis product and is formed from new and/or previously used parts that are equivalent to new in performance and reliability, or (c) exchange the Otis Product for a refund of your purchase price, when an Otis Product is submitted.

Otis Warranty service will treat service/repairs as quick-turn exchanges. Otis Warranty service does not replace any board level components, (i.e. magnetic switches, resistors, capacitors, relays, etc.).

Otis Products may require the replacement of certain user-installable parts or Otis Products. A replacement part or Otis Product, including a user-installable part that has been installed in accordance with instructions provided by Otis, assumes the remaining term of the Warranty, or ninety (90) days from the date of replacement or repair, whichever provides the longer coverage for the end-user/purchaser. When an Otis product or part is replaced, or a refund is provided, any replacement item becomes your property and the replaced or refunded item becomes Otis' property.

For Otis Products requiring Warranty service that are located outside of the United States, the customer is responsible for compliance of all import/export laws and regulations/requirements, including associated taxes and other charges. Where applicable, Otis Warranty service may repair/replace products with parts that comply with local/regional standards.

Otis Products covered under Warranty will receive service/repairs at no charge to the end-user/purchaser. Otis Products not under Warranty will be diagnosed for service/repair and the end-user/purchaser will be notified of the recommended service/repairs and applicable charges. The completion of the service/repairs, or the return of the unrepaired product, is at the discretion of the end-user/purchaser. Charges assessed for service/repair on Otis Products not under Warranty are at a rate of list cost minus dealer/distributor percent discount.

Upon completion of Warranty service, Otis Warranty service will return the device to the end-user/purchaser. Please consult the Otis website for more information concerning shipping costs for Warranty service.

Otis reserves the right to change the method by which Otis Warranty service is provided. Otis also reserves the right to change the Otis Product's eligibility to receive a particular method of service. Warranty service may be limited for Otis Products in the country where the manufacturer or product's authorized sellers/distributors originally sold the product. Warranty service options, parts availability and response times may vary.

(†) Battery for the GEN II Model OI-6940 Battery-Powered Multi-Gas Detector is excluded from the ninety (90) day warranty policy.

APPENDIX E: INFORMATION ABOUT RMA SERVICE REPAIRS

Otis Instruments, Inc. offers technical support to our customers. Please contact the Otis Instruments RMA Service Department for technical support, repair requests, warranty inquiries, end-user commission reports, dealer/distributor support, and Modbus setup inquiries and services.

This appendix is for information purposes only. Please visit our website at www.otisinstruments.com/RMA to obtain the latest version of the Otis Instruments, Inc. Return Material Authorization (RMA) Service Repair Form and shipment instructions.

IMPORTANT INFORMATION

All RMA Service repairs must be shipped to OTIS Instruments / Repairs, 301 South Texas Ave., Bryan, Texas 77803.

To ensure that RMA Service repairs are processed as timely as possible, the Otis Instruments, Inc. Return Material Authorization (RMA) Service Repair Form must be completed in its entirety and included within the box at the time of shipment. Customer contact information and product information, including model number, serial number, and specific reason(s) for service, will need to be accessible in order to complete the form. Shipments received that do not include the form, or if the form is incomplete, will be returned (unrepaired) COD to the customer.

Products/parts must be shipped in the proper packaging and the shipping materials must adhere to ESD safety precautions, as applicable. The entire assembly, as originally shipped from the manufacturer, must be returned for repair. When shipping sensor assemblies (gas detectors), the antenna, rain guard, and battery must be removed prior to shipment. Failure to adhere to these instructions will result in the products/parts being returned to sender.

Once the RMA Service Repair Form is received by the Otis Instruments RMA Service Department, a RMA Service number will be generated. The RMA Service number will be sent to the email address provided for verification of receipt.

RMA Service quotes have a thirty (30) day expiration. Quotes that do not receive a purchase order response within thirty (30) days of the quote will be canceled and all products/parts will be returned (unrepaired) COD to the customer.

Discontinued products may not be returned for RMA Service for repair. For a listing of the Otis Instruments, Inc. discontinued products, please visit our website at www.otisinstruments.com/RMA. If your product/part has been discontinued, please contact your local sales representative for replacement options.

All RMA Service repairs are treated as quick-return exchanges. Otis Instruments, Inc. does not replace board level components (i.e. magnetic switches, resistors, capacitors, relays, etc.).

There is no charge for RMA Service repairs that are within the specified warranty period. For a copy of the Otis Instruments, Inc. Product Warranty Statement, please visit our website at www.otisinstruments.com/official_statements. Products/parts that are not within the specified warranty period will result in a charge to the customer for service.

Products/parts that fall within the Otis Instruments, Inc. operating specifications deemed defective due to customer misapplication will be returned as is, and may result in a per unit evaluation fee to the customer. Otis Instruments, Inc. reserves the right to return customer-damaged or no-fault found products/parts from the Otis Instruments RMA Service Department COD to the customer.

If advanced replacement is required, please contact the Service Department for more information.

INTERNATIONAL RMA SERVICE REPAIRS

The customer is responsible for complying with all import/export requirements for shipment of RMA/Service repairs to Otis Instruments, Inc.

OTIS INSTRUMENTS RMA SERVICE DEPARTMENT

Otis Instruments / Repairs
301 South Texas Ave.
Bryan, Texas 77803
Office: 979.776.7700
Fax: 979.776.7719
service@otisinstruments.com
www.otisinstruments.com/RMA

APPENDIX F: INFORMATION ABOUT RMA RETURNS FOR CREDIT

Without exception, all RMA Returns for Credit to Otis Instruments, Inc. must receive prior approval before shipment. Otis Products received that do not have prior approval will be returned (uncredited) COD to the customer. For inquiries and approval for RMA Returns for Credit, please contact your local sales representative.

This appendix is for information purposes only. Please visit our website at www.otisinstruments.com/RMA to obtain the latest version of the Otis Instruments, Inc. Return Material Authorization (RMA) Return for Credit Form and shipment instructions.

IMPORTANT INFORMATION

All RMA Returns for Credit must be shipped to OTIS Instruments / RMA Returns, 301 S. Texas Avenue, Bryan, Texas 77803.

Product/part returns must be in their original condition and packaging, as shipped from the manufacturer. Returns that do not meet these specifications will be rejected for return for credit. Otis Instruments, Inc. reserves the right to return products/parts deemed to be inadequate (uncredited) COD to the customer.

To ensure that Returns for Credit are processed as timely as possible, the RMA Return for Credit Form must be completed in its entirety and included within the box at the time of shipment. Customer contact information and product information, including model number, serial number, and specific reason(s) for service, will need to be accessible in order to complete the form. Shipments received that do not include the form (or if the form is incomplete) will be returned (uncredited) COD to the customer.

Once the shipment is received by the Otis Instruments RMA Returns Department, a RMA number will be generated. The RMA number will be sent to the email address provided for verification of receipt.

All RMA Returns for Credit will be processed for approval by the manufacturer.

A restocking fee of 15% will be charged for all products/parts returned to the manufacturer.

Discontinued products may not be returned for credit. For a listing of Otis Instruments, Inc. discontinued products, please visit our website at www.otisinstruments.com/RMA. If your product/part has been discontinued, please contact your local sales representative for replacement options.

INTERNATIONAL RMA SERVICE REPAIRS

The customer is responsible for complying with all import/export requirements for shipment of RMA/Service repairs to Otis Instruments, Inc.

OTIS INSTRUMENTS RMA RETURNS DEPARTMENT

Otis Instruments / RMA Returns
301 S. Texas Avenue
Bryan, Texas 77803
Office: 979.776.7700
Fax: 979.776.7719
service@otisinstruments.com
www.otisinstruments.com/RMA

Notes:



Otis Instruments

301 S. Texas Avenue, Bryan, Texas 77803

Tel: 979.776.7700 Fax: 979.776.7719

sales@otisinstruments.com

service@otisinstruments.com

www.otisinstruments.com